

# Fuller Mid Range Transmissions TRSM0197

October 2007



*Powering Business Worldwide*

BACKED BY

**Roadranger**

SUPPORT

For parts or service call us  
Pro Gear & Transmission, Inc.



**1 (877) 776-4600**

**(407) 872-1901**

**parts@eprogear.com**

**906 W. Gore St.**

**Orlando, FL 32805**



---

## **Caution -**

Before towing the vehicle, be sure to lift the rear wheels off the ground or disconnect the driveline to avoid damage to the transmission during towing.

---

## FOREWARD

This manual has been prepared to provide the customer and the maintenance personnel with information and instructions on the maintenance and repair of the CLARK® Transmission.

Extreme care has been exercised in the design, selection of materials and manufacturing of these units. The slight outlay in personal attention and cost required to provide regular and proper lubrication, inspection at stated intervals, and such adjustments as may be indicated will be reimbursed many times in low cost operation and trouble free service.

In order to become familiar with the various parts of the transmission, its principle of operation, troubleshooting and adjustments, it is urged that the service person study the instructions in this manual carefully and use it as a reference when performing maintenance and repair operations.

Whenever repair or replacement of components parts is required, only Clark-approved parts as listed in the applicable parts manual should be used. Use of "will-fit" or non-approved parts may endanger proper operation and performance of the equipment. The Clark Equipment Company does not warrant repair or replacement parts, nor failures resulting from the use thereof, which are not supplied by or approved by the Clark Equipment Company.

**IMPORTANT: Always furnish the Distributor with the transmission serial and model number when ordering parts.**

## CL550 SERIES TRANSMISSION

The CL550 is a 5-speed forward, 1-speed reverse transmission of advanced design offering you the most efficient torque capacity-to-weight ratio of any 5-speed transmission in its torque range. Two basic ratios are available as shown in the table below. The CL551 ratio is designed for use in trucks equipped with a 3 or 4-speed auxiliary transmission and the CL557 ratio is designed for use with trucks equipped with a 2-speed rear axle.

Speed	MODELS		
	CL551/390V	CL557/397V	CL558
Fifth	Direct	Direct	Direct
Fourth	1.52:1	1.17:1	1.28
Third	2.54:1	1.99:1	2.15
Second	4.35:1	3.68:1	3.68
First	7.52:1	6.82:1	6.36
Reverse	6.27:1	5.30:1	5.30

Constant mesh in all gears, including low and reverse, is a CL550 feature as is helical gearing throughout, including low and reverse.


The Clark split-pin synchronizer is used in 2nd, 3rd 4th and 5th gears. Greater bearing capacity in the CL550 is achieved by the use of numerous needle roller bearings, and two tapered roller bearings and one large straight roller bearing at the rear of the countershaft.

Shift forks have replaceable bronze inserts. The shift pattern is of the standard progression type with all shifts having the same throw at the lever.

Page B shows a cutaway drawing of the CL550. Page C shows a cutaway drawing of the 390V.


CLARK

CL550 TRANSMISSION

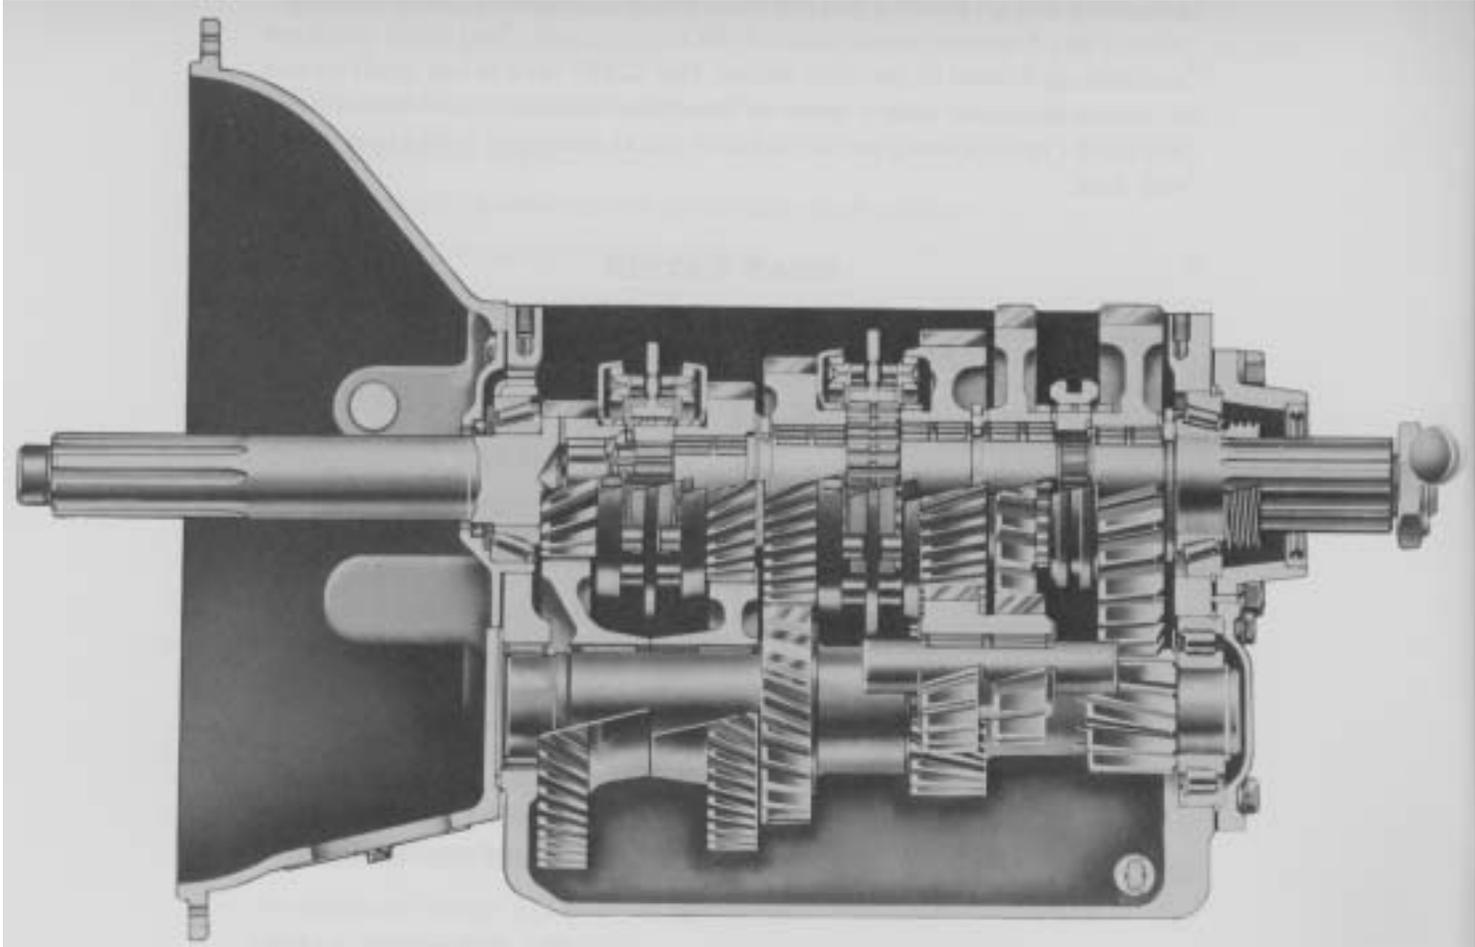

CLARK

## 390V TRANSMISSION

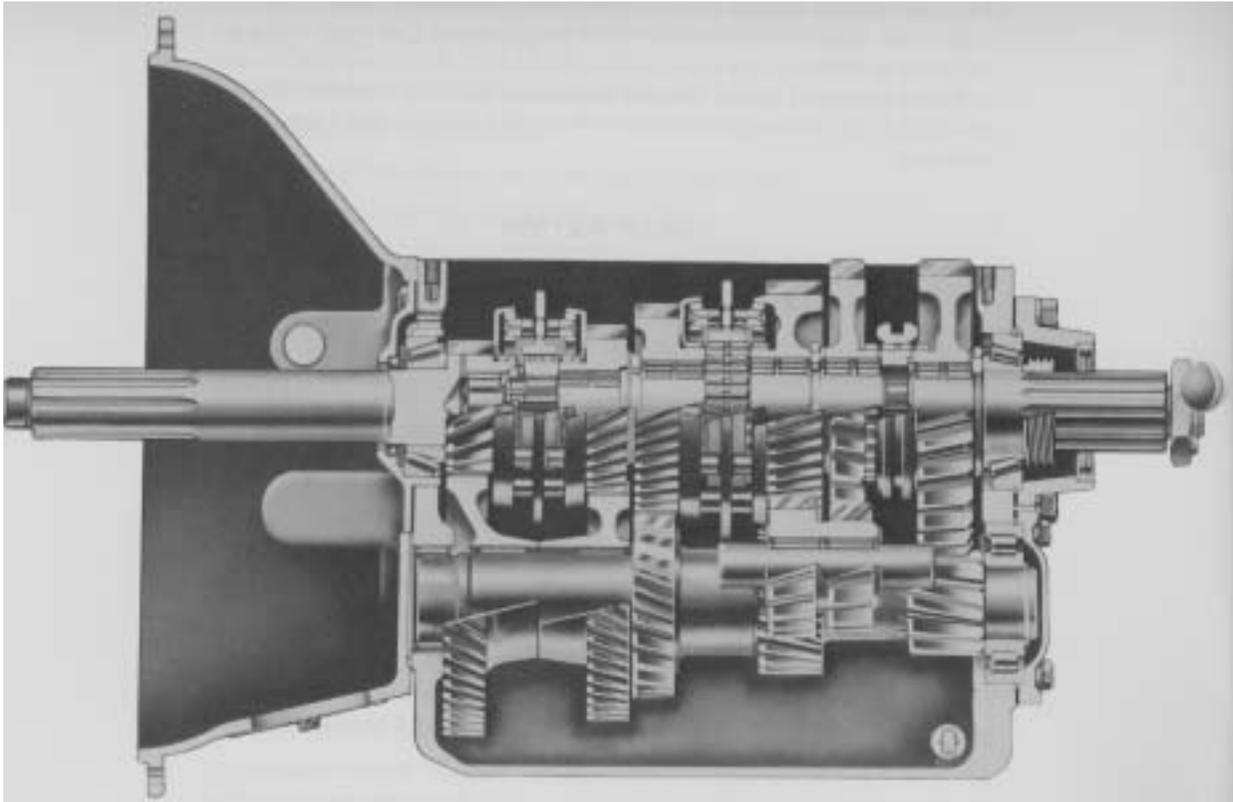

---

## **THE CLARK SYNCHRONIZER AND HOW IT WORKS FOR YOU**


The Clark split-pin synchronizer prevents the clashing of the gears and increase the speed of shifting.

In a conventional transmission which does not have synchronizers the absence of gear clashing is dependent entirely on the skill of the truck driver. By double-clutching and split second timing of engine speeds with the gear shifting movement, a driver can synchronize the speeds of the engaging gears and thereby prevent the damage to gears by clashing when a fast shift. The splint-pin sychronzier performs the same function with or without the “double-clutching” operating even though the driver does not accurately time his gear shifting movements. It also mechanically prevents the driver from completing the shift to the point of gear engagement until the engaging gears have reached the same or synchronous speeds. This is known as the blocking action of the synchronizer and it is this action that makes the operation of shifting a transmission having synchronizers different from one which does not have synchronizers.

Upon shifting gears in these synchronized transmissions the first part of the gear shift lever movement brings the blockers into contact. The blockers momentarily prevent further movement of the shift lever and the pressure exerted by the driver to complete the movement, is transferred by the blockers to the synchronizer providing the force necessary to synchronize the gears being engaged. When the engaging gears have reached the same speed, the blockers automatically disengage, permitting the gear shift lever movement to be completed. Therefore, to properly shift a synchronized transmission a steady and continuous pressure must be applied by the driver to the shift lever until the shift is completed. Under normal conditions this action is instantaneous.

Sometimes difficulty is experienced in shifting a synchronizer when the vehicle is standing still. This is caused by the fact that the disengagement of the blockers requires relative rotation and with the vehicle at rest and with the engine clutch released, there may be at times, no relative rotation of the engaging gears. Under these conditions, the same continuous pressure should be applied to the shift lever and at the same time, the clutch should be engaged slightly. This will give sufficient rotation to unblock the synchronizer and allow the shift to be completed without difficulty.

## RECOMMENDED LUBRICANTS FOR CLARK MANUALLY SHIFTED TRANSMISSIONS

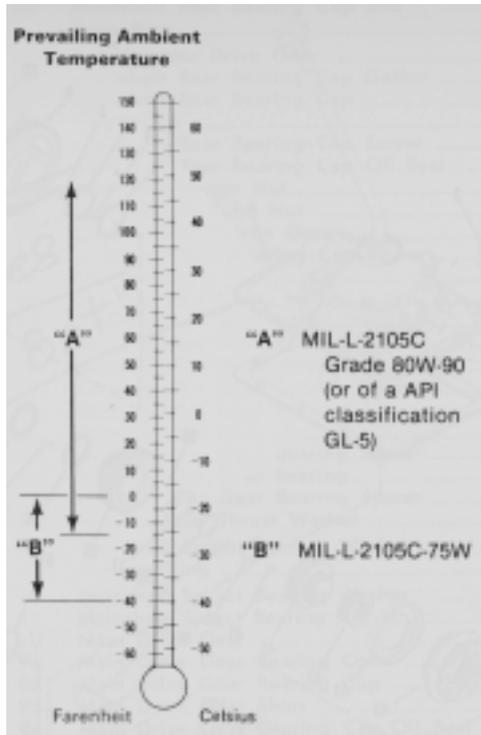

\*Mil-L-2105C Extreme Pressure Lubricant (or API classification GL-5) of the SAE viscosity recommended in the chart at the right is preferred. All lubricants should be backed by the reputation of a well-know supplier. It is important to specify EP lubricants of the MIL-L-2105C type only, or of a API classification GL-5.

### **\*Do not use extreme pressure lubricants other than MIL-L-2105C or of a API classification GL-5.**

Many EP lubricants contain highly-active chemical compounds that have been formulated to perform satisfactorily in specific types of applications. Severe corrosion, residual deposits, and inadequate lubrication may result from improper application. Use of EP lubricants other that MIL-L-2105C or of a API classification GL-5 may result in failure and/or impaired operation.

**DRAINING ECONOMY** - The object in draining the transmission oil periodically is to eliminate possible bearing surface abrasion and attendant wear. Minute particles of metal, the product of normal wear in service, are deposited in and circulate with the transmission oil. The oil changes chemically, due to its repeated heating and cooling, also the terrific churning it undergoes in the presence of air. It is desirable to drain out this used oil after the first 1,000 miles (1609,0 Km) of service (regardless of type of service). Subsequent drains should be made every 24,000 miles (38616,0 Km) or six (6) months (whichever comes first) for highway service, and every 8,000 to 10,000 miles [12872,0-16090,0 Km] or six (6) months (whichever comes first) "on-off" highway and "pick-up and delivery" types of service. Do this only when the transmission is thoroughly warm.


comes first) for highway service, and every 8,000 to 10,000 miles [12872,0-16090,0 Km] or six (6) months (whichever comes first) "on-off" highway and "pick-up and delivery" types of service. Do this only when the transmission is thoroughly warm.

**FLUSHING** - After draining, flushing is desirable. Replace the drain plug and fill the transmission to the proper level with a light flushing oil. Drive the transmission for a short period at fast idle in such a manner that the gears in the transmission are rotating without load. This washes out the old oil clinging to the interior of the gear case, covers and shifter rails. **BE SURE TO DRAIN OUT ALL** of the flushing oil before attempting to refill with new oil. This flushing procedure is most important after first drain.

**REFILL** - First, removal all dirt around the filler plug, Then refill with new oil of a grade recommended for the existing season and prevailing service. Fill to the bottom of the level testing plug positioned on the side of the transmission. **DO NOT OVERFILL**, as the excess quantity will serve no useful purpose. If the oil level is too high, it will cause excessive oil churning and high oil temperature and possible leakage.

**INSPECTION** - Oil level inspection should be made every 6,000 miles [9654,0 Km] which usually coincides with the vehicle manufacturers chassis lube procedure. Always clean around filler plug before inspection. Add sufficient oil to maintain correct level.

# CLARK

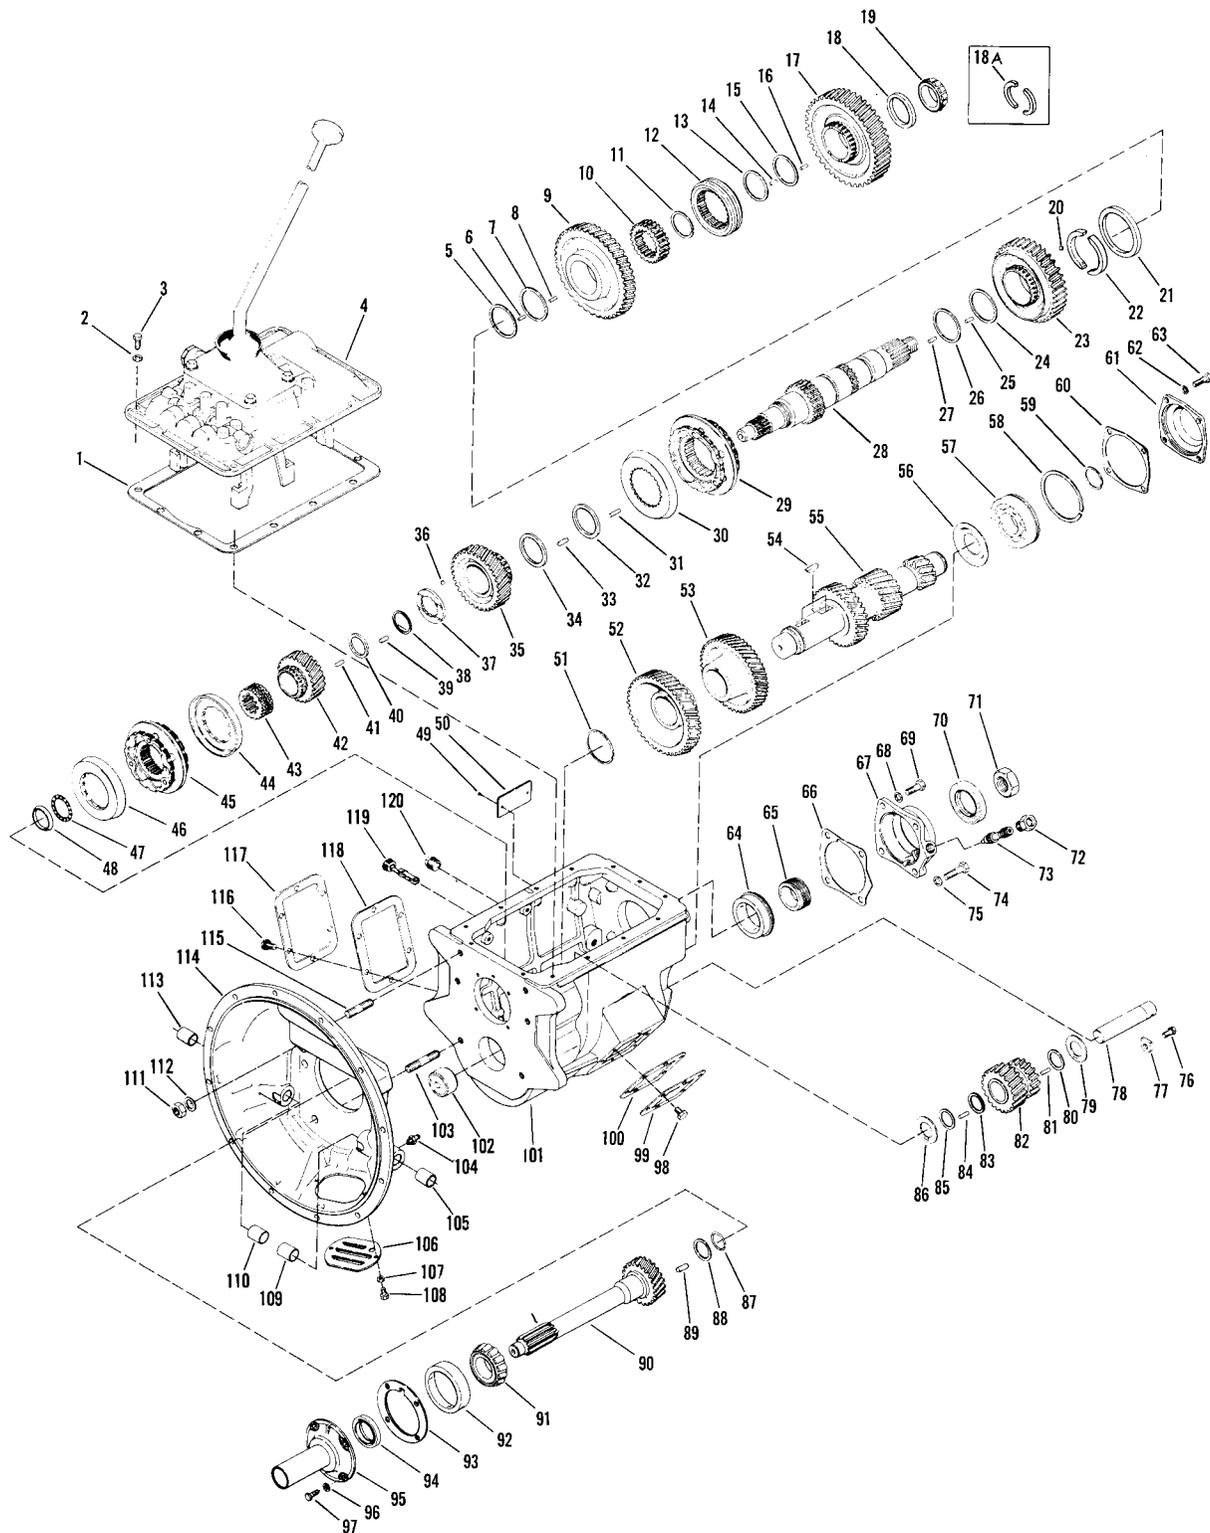

## CapscrewCL550-SERIES TRANSMISSION

ITEM	DESCRIPTION	QTY.
1	Control Cover Gasket .....	1
2	Lockwasher.....	14
3	Control Cover Screw .....	14
4	Control Cover Assembly .....	1
5	Mainshaft Reverse Gear Bearing Spacer .....	1
6	Mainshaft Reverse Gear Roller Bearing.....	48
7	Mainshaft Reverse Gear Bearing Spacer .....	1
8	Mainshaft Reverse Gear Roller Bearing.....	48
9	Mainshaft Reverse Gear .....	1
10	1st & Reverse Shift Hub Sleeve .....	1
11	Shift Hub Sleeve Retainer Ring .....	1
12	1st & Reverse Shift Hub .....	1
13	Mainshaft 1st Gear Bearing Spacer .....	1
14	Mainshaft 1st Gear Roller Bearing .....	44
15	Mainshaft 1st Gear Bearing Spacer .....	1
16	Mainshaft 1st Gear Roller Bearing .....	44
17	Mainshaft 1st Gear.....	1
18	Split Washer Retainer Ring .....	1
	18A - Mainshaft Rear Bearing Split Washer** .....	1
19	Mainshaft Rear Bearing Cone.....	1
20	Ball.....	1
21	Split Washer Retainer Ring .....	1
22	Mainshaft 2nd & Reverse Gear Split Washer .....	2
23	Mainshaft 2nd Gear.....	1
24	Mainshaft 2nd Gear Bearing Spacer.....	1
25	Mainshaft 2nd Gear Roller Bearing .....	48
26	Mainshaft 2nd Gear Bearing Spacer.....	1
27	Mainshaft 2nd Gear Roller Bearing .....	48
28	Mainshaft.....	1
29	2nd & 3rd Synchronizer Assembly .....	1
30	3rd Gear Synchronizer Cup.....	1
31	Mainshaft 3rd Gear Roller Bearing** .....	48
32	Mainshaft 3rd Gear Bearing Spacer ** .....	1
33	Mainshaft 3rd Gear Roller Bearing** .....	48
34	Mainshaft 3rd Gear Bearing Spacer** .....	1
35	Mainshaft 3rd Gear .....	1
36	Ball** .....	1
37	Mainshaft 3rd Gear Locating Washer.....	1
38	Mainshaft 3rd Gear Retainer Ring.....	1
39	Mainshaft 4th Gear Roller Bearing** .....	34
40	Mainshaft 4th Gear Bearing Spacer** .....	1
41	Mainshaft 4th Gear Roller Bearing** .....	34
42	Mainshaft 4th Gear .....	1
43	4th & 5th Shift Hub Sleeve.....	1


<b>ITEM</b>	<b>Description</b>	<b>QTY.</b>
44	4th & 5th Synchronizer Cup.....	1
45	4th & 5th Synchronizer Assembly.....	1
46	4th & 5th Synchronizer Cup.....	1
47	4th & 5th Shift Hub Bearing .....	1
48	4th & 5th Shift Hub Bearing Race .....	1
49	Name Plate Screw.....	2
50	Name Plate.....	1
51	Countershaft Gear Retainer Ring .....	1
52	Countershaft Drive Gear.....	1
53	Countershaft 4th Gear.....	1
54	Countershaft Gear Key .....	2
55	Countershaft .....	1
56	Oil Baffle .....	1
57	Countershaft Rear Bearing.....	1
58	Countershaft Rear Bearing Outer Retainer Ring.....	1
59	Countershaft Rear Bearing Retainer Ring .....	1
60	Countershaft Rear Bearing Cap Gasket .....	1
61	Countershaft Rear Bearing Cap .....	1
62	Lockwasher.....	4
63	Rear Bearing Capscrew .....	4
64	Mainshaft Rear Bearing Cup & Snap Ring .....	1
65	Speedometer Drive Gear .....	1
66	Mainshaft Rear Bearing Cap Gasket.....	1
67	Mainshaft Rear Bearing Cap.....	1
68	Lockwasher.....	3
69	Mainshaft Rear Bearing Capscrew .....	3
70	Mainshaft Rear Bearing Cap Oil Seal.....	1
71	Mainshaft Flange Nut .....	1
72	Speedometer Tube Nut.....	1
73	Speedometer Driven Gear .....	1
74	Mainshaft Rear Bearing Capscrew .....	1
75	Lockwasher.....	1
76	Reverse Idler Lockscrew.....	1
77	Reverse Idler Shaft Lock.....	1
78	Reverse Idler Shaft .....	1
79	Reverse Idler Thrust Washer .....	1
80	Reverse Idler Gear Bearing Spacer.....	1
81	Reverse Idler Gear Bearing .....	26
82	Reverse Idler Gear .....	1
83	Reverse Idler Gear Bearing Spacer.....	1
84	Reverse Idler Gear Bearing .....	26
85	Reverse Idler Gear Bearing Spacer.....	1
86	Reverse Idler Thrust Washer.....	1
87	Mainshaft Spigot Bearing Washer Retainer Ring .....	1
<b>ITEM</b>	<b>Description</b>	<b>QTY.</b>

88	Mainshaft Spigot Bearing Washer.....	1
89	Mainshaft Spigot Bearing.....	14
90	Main Drive Gear .....	1
91	Main Drive Gear Bearing Cone .....	1
92	Main Drive Gear Bearing Cup .....	1
93	Main Drive Gear Bearing Shim .....	AR
94	Main Drive Gear Bearing Cap Oil Seal .....	1
95	Main Drive Gear Bearing Cap .....	1
96	Lockwasher.....	4
97	Bearing Capscrew .....	4
98	P.T. O. Cover Plate Screw .....	6
99	P.T. O. Cover Plate.....	1
100	P.T. O. Cover Plate Gasket .....	1
101	Transmission Case.....	1
102	Countershaft Pilot Bearing .....	1
103	Clutch Housing to Case Stud .....	2
104	Pedal Shaft Grease Fitting.....	2
105	Pedal Shaft Bushing.....	1
106	Clutch Housing Cover .....	1
107	Clutch Housing Cover Screw Lockwasher.....	2
108	Clutch Housing Cover Screw .....	2
109	Bushing.....	1
110	Bushing.....	1
111	Clutch Housing To Case Stud Nut .....	6
112	Clutch Housing To Case Stud Lockwasher .....	6
113	Bushing.....	1
114	Clutch Housing .....	1
115	Clutch Housing To Case Stud .....	4
116	P.T. O. Cover Plate Screw .....	6
117	P.T. O. Cover Plate.....	1
118	P.T. O. Cover Plate Gasket .....	1
119	Magnetic Drain Plug .....	1
120	Filler Plug.....	1

\*\*\* - Not used on all models

AR - As Required

CLARK

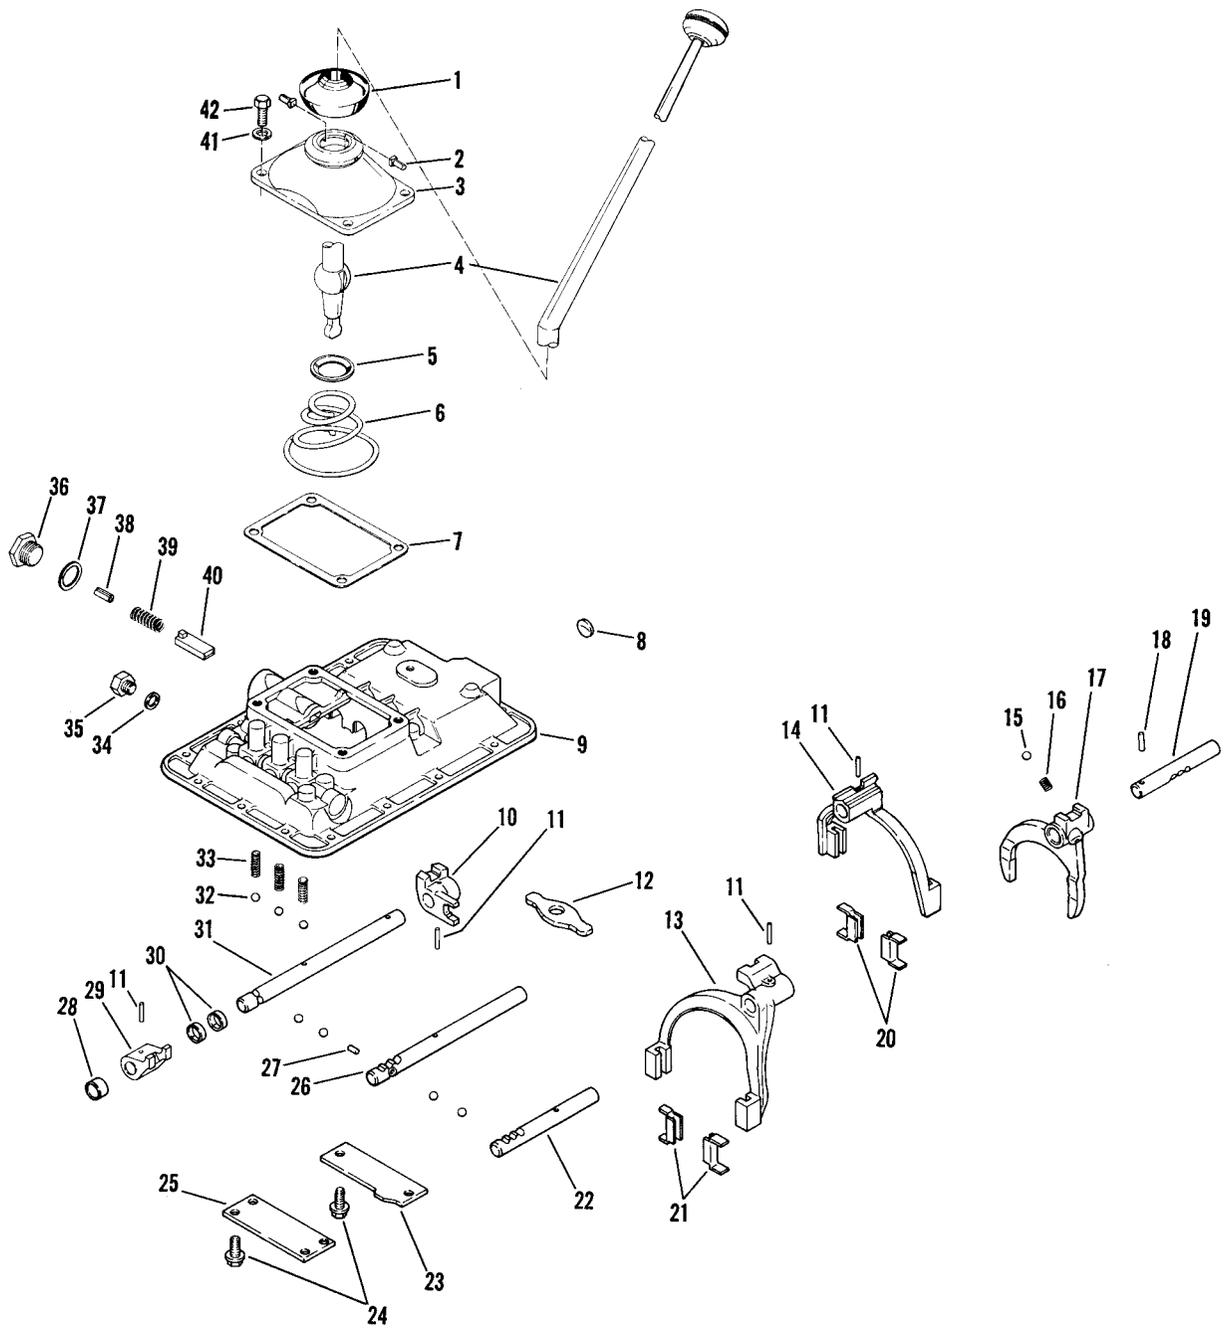


## CL550-SERIES CONTROL PARTS GROUP

ITEM	Description	QTY
1	Gear Shift Lever Dust Cover.....	1
2	Gear Shift Lever Pivot Pin.....	2
3	Control Top.....	1
4	Gear Shift Lever.....	1
5	Gear Shift Lever Support Washer.....	1
6	Support Spring.....	1
7	Control Top or Remote Control Gasket.....	1
8	Expansion Plug.....	1
9	Shift Rail Housing.....	1
10	1st & Reverse Rocker Lug.....	1
11	Shift Fork Lock Pin.....	4
12	1st & Reverse Rocker Arm.....	1
13	4th & 5th Shift Fork.....	1
14	2nd & 3rd Shift Fork.....	1
15	Mesh Lock Ball.....	1
16	1st & Reverse Mesh Lock Spring.....	1
17	1st & Reverse Shift Fork.....	1
18	1st & Reverse Shift Fork Rail Lock Pin.....	1
19	1st & Reverse Shift Rail.....	1
20	Shift Fork Bushing.....	2
21	Shift Fork Bushing.....	2
22	4th & 5th Shift Rail.....	1
23	Rear Rail Support.....	1
24	Rail Support Screw.....	6
25	Front Rail Support.....	1
26	2nd & 3rd Shift Rail.....	1
27	Inter-Lock Cross Pin.....	1
28	1st Gear Shift Stop Space (wide).....	1
29	1st & Gear Shift Lug.....	1
30	1st & Gear Shift Stop Spacer.....	1

ITEM	Description	QTY
31	1st & Reverse Shift Rail .....	1
32	Mesh & Inter-Lock Ball .....	10
33	Mesh Lock Spring .....	3
34	Back-up Switch Hole Plug Gasket .....	1
35	Back-up Switch Hole Plug .....	1
36	1st & Reverse Latch Plunger Springer Plug .....	1
37	1st & Reverse Latch Plunger Plug Gasket .....	1
38	1st & Reverse Latch Plunger Stop .....	1
39	1st & Reverse Latch Plunger Spring .....	1
40	1st & Reverse Latch Plunger .....	1
41	Control Top Screw .....	4
42	Screw Lockwasher	

CLARK

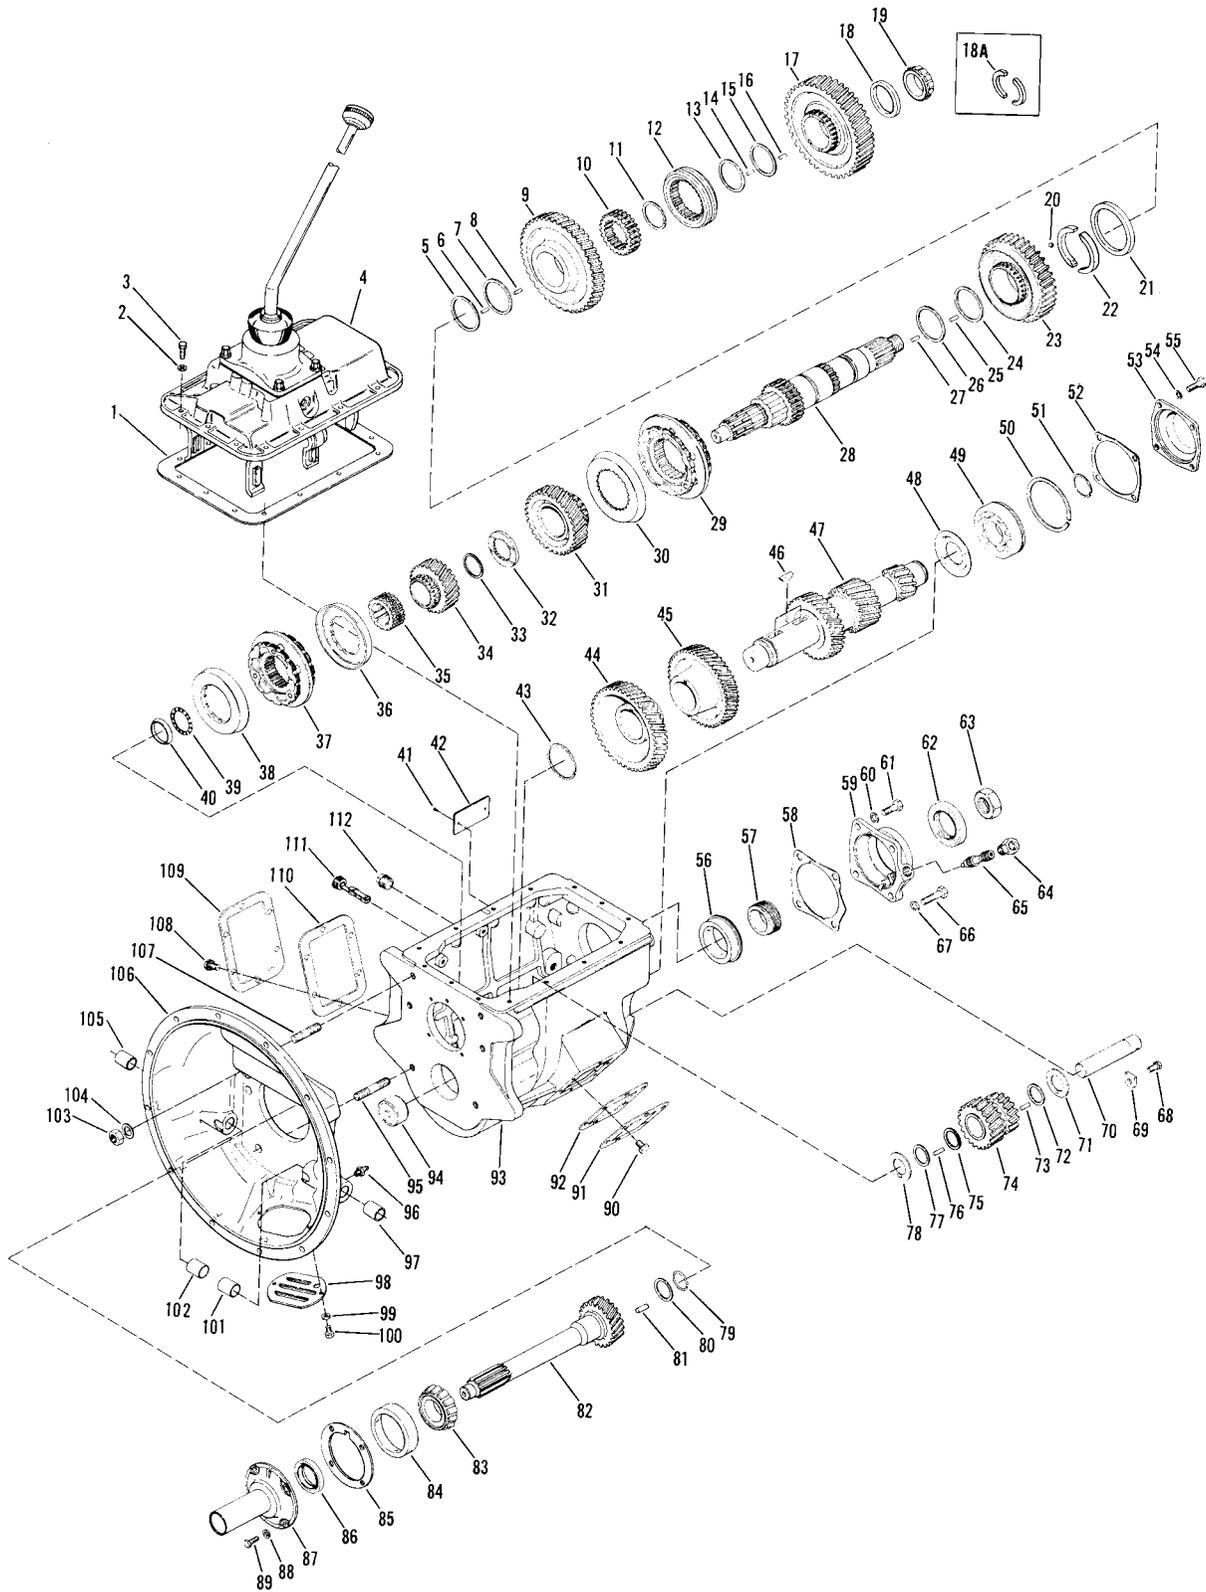

## CL550-SERIES TRANSMISSION


ITEM	DESCRIPTION	QTY.
1	Control Cover Gasket .....	1
2	Lockwasher.....	14
3	Control Cover Screw .....	14
4	Control Cover Assembly .....	1
5	Mainshaft Reverse Gear Bearing Spacer .....	1
6	Mainshaft Reverse Gear Roller Bearing.....	48
7	Mainshaft Reverse Gear Bearing Spacer .....	1
8	Mainshaft Reverse Gear Roller Bearing.....	48
9	Mainshaft Reverse Gear .....	1
10	1st & Reverse Shift Hub Sleeve .....	1
11	Shift Hub Sleeve Retainer Ring .....	1
12	1st & Reverse Shift Hub .....	1
13	Mainshaft 1st Gear Bearing Spacer .....	1
14	Mainshaft 1st Gear Roller Bearing .....	44
15	Mainshaft 1st Gear Bearing Spacer .....	1
16	Mainshaft 1st Gear Roller Bearing .....	44
17	Mainshaft 1st Gear .....	1
18	Mainshaft Rear Bearing Thrust or Split Washer Retainer Ring.1 18A - Mainshaft Split Washer** .....	1
19	Mainshaft Rear Bearing Cone.....	1
20	Ball.....	1
21	Split Washer Retainer Ring .....	1
22	Mainshaft 2nd & Reverse Gear Split Washer .....	2
23	Mainshaft 2nd Gear.....	1
24	Mainshaft 2nd Gear Bearing Spacer.....	1
25	Mainshaft 2nd Gear Roller Bearing .....	48
26	Mainshaft 2nd Gear Bearing Spacer.....	1
27	Mainshaft 2nd Gear Roller Bearing .....	48
28	Mainshaft.....	1
29	2nd & 3rd Synchronizer Assembly .....	1
30	3rd Gear Synchronizer Cup.....	1
31	Mainshaft 3rd Gear .....	1
32	Mainshaft 3rd Gear Locating Washer.....	1
33	Mainshaft 3rd Gear Retainer Ring.....	1
34	Mainshaft 4th Gear .....	1
35	4th & 5th Shift Hub Sleeve.....	1
36	4th & 5th Synchronizer Cup.....	1
37	4th & 5th Synchronizer Assembly.....	1
38	4th & 5th Synchronizer Cup.....	1
39	4th & 5th Shift Hub Bearing .....	1
40	4th & 5th Shift Hub Bearing Race .....	1
41	Name Plate Screw.....	2
42	Name Plate.....	1
43	Countershaft Gear Retainer Ring .....	1

<b>ITEM</b>	<b>Description</b>	<b>QTY.</b>
44	Countershaft Drive Gear.....	1
45	Countershaft 4th Gear.....	1
46	Countershaft Gear Key.....	2
47	Countershaft.....	1
48	Oil Baffle.....	1
49	Countershaft Rear Bearing.....	1
50	Countershaft Rear Bearing Outer Retainer Ring.....	1
51	Countershaft Rear Bearing Retainer Ring.....	1
52	Countershaft Rear Bearing Cap Gasket.....	1
53	Countershaft Rear Bearing Cap.....	1
54	Lockwasher.....	4
55	Rear Bearing Capscrew.....	4
56	Mainshaft Rear Bearing Cup & Snap Ring.....	1
57	Speedometer Drive Gear.....	1
58	Mainshaft Rear Bearing Cap Gasket.....	1
59	Mainshaft Rear Bearing Cap.....	1
60	Lockwasher.....	3
61	Mainshaft Rear Bearing capscrew.....	3
62	Mainshaft Rear Bearing Cap Oil Seal.....	1
63	Mainshaft Flange Nut.....	1
64	Speedometer Tube Nut.....	1
65	Speedometer Driven Gear.....	1
66	Mainshaft Rear Bearing capscrew.....	1
67	Lockwasher.....	1
68	Reverse Idler Lockscrew.....	1
69	Reverse Idler Shaft Lock.....	1
70	Reverse Idler Shaft.....	1
71	Reverse Idler Thrust Washer.....	1
72	Reverse Idler Gear Bearing Spacer.....	1
73	Reverse Idler Gear Bearing.....	26
74	Reverse Idler Gear.....	1
75	Reverse Idler Gear Bearing Spacer.....	1
76	Reverse Idler Gear Bearing.....	26
77	Reverse Idler Gear Bearing Spacer.....	1
78	Reverse Idler Thrust Washer.....	1
79	Mainshaft Spigot Bearing Washer Retainer Ring.....	1
80	Mainshaft Roller Bearing Washer.....	1
81	Mainshaft Roller Bearing.....	14
82	Main Drive Gear.....	1
83	Main Drive Gear Bearing Cone.....	1
84	Main Drive Gear Bearing Cup.....	1
85	Main Drive Gear Bearing Shim.....	AR
86	Main Drive Gear Bearing Cap Oil Seal.....	1
87	Main Drive Gear Bearing Cap.....	1
<b>ITEM</b>	<b>Description</b>	<b>QTY.</b>

---

88	Bearing Capscrew Lockwasher .....	4
89	Bearing Capscrew .....	4
90	P.T. O. Cover Plate Screw .....	6
91	P.T. O. Cover Plate.....	1
92	P.T. O. Cover Plate Gasket .....	1
93	Transmission Housing .....	1
94	Countershaft Pilot Bearing .....	1
95	Clutch Housing to Case Stud .....	2
96	Grease Fitting.....	2
97	Bushing.....	1
98	Clutch Housing Cover .....	1
99	Cover Lockwasher .....	2
100	Cover Screw.....	2
101	Bushing.....	1
102	Bushing.....	1
103	Clutch Housing To Case Stud Nut .....	6
104	Clutch Housing To Case Stud Lockwasher.....	6
105	Bushing.....	1
106	Clutch Housing .....	1
107	Clutch Housing To Case Stud.....	4
108	P.T. O. Cover Plate Screw .....	6
109	P.T. O. Cover Plate.....	1
110	P.T. O. Cover Plate Gasket .....	1
111	Magnetic Drain Plug .....	1
112	Filler Plug.....	1

CLARK

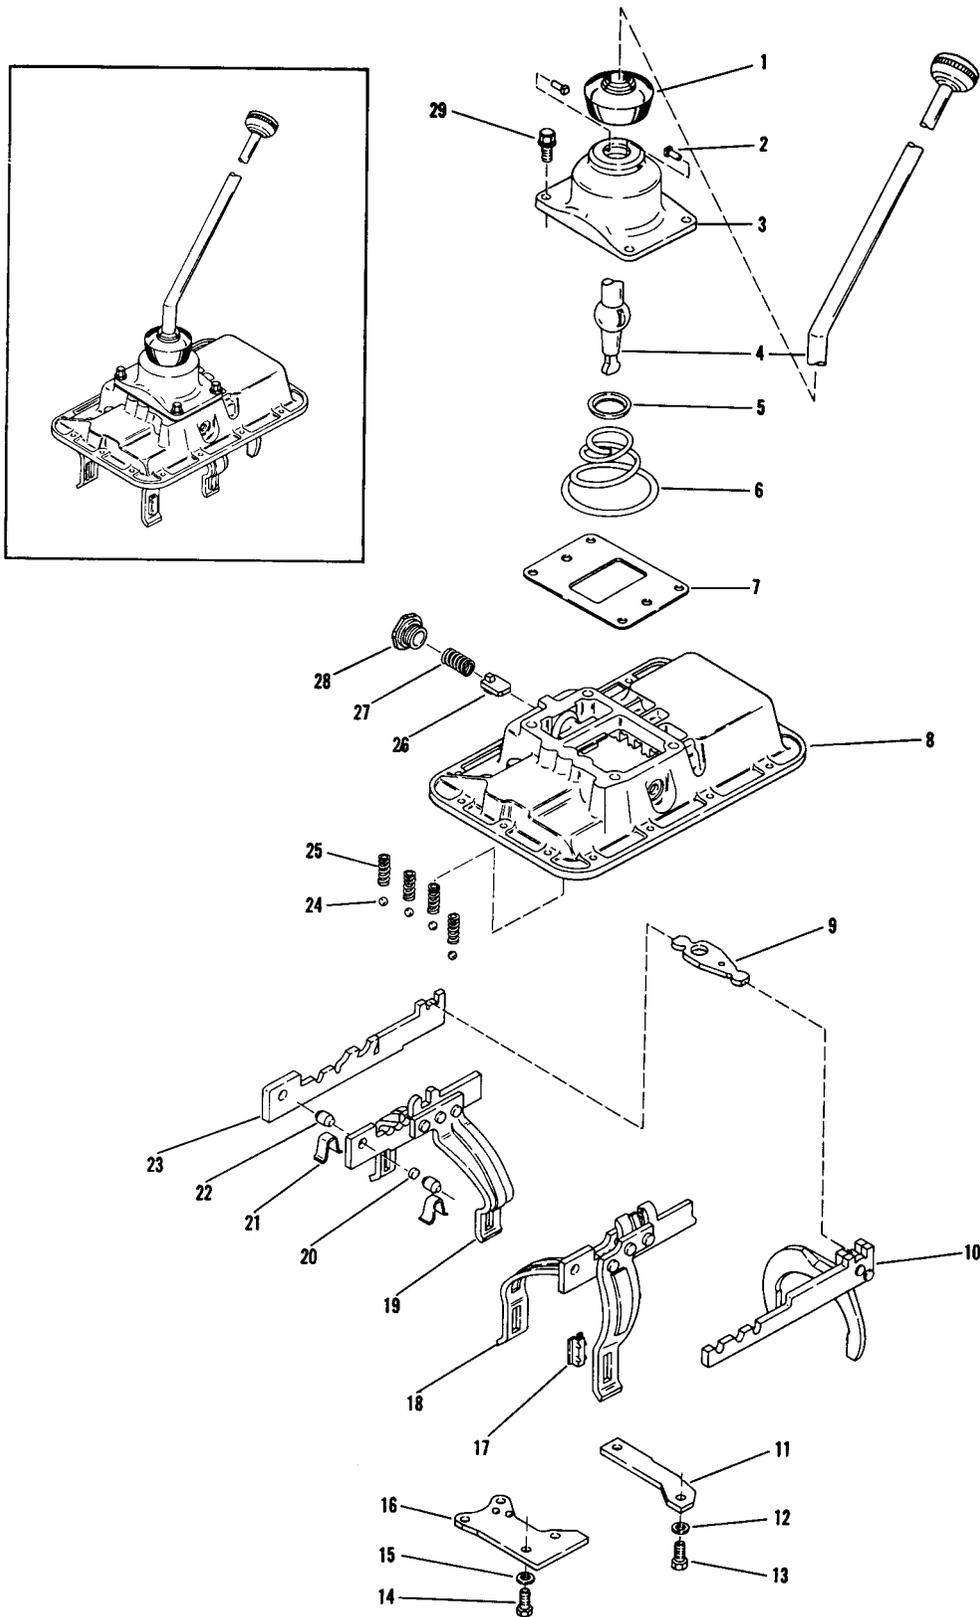

## 390V-SERIES CONTROL PARTS GROUP

ITEM	Description	QTY
1	Gear Shift Lever Dust Cover.....	1
2	Gear Shift Lever Pivot Pin.....	2
3	Control Top.....	1
4	Gear Shift Lever.....	1
5	Gear Shift Lever Support Washer.....	1
6	Support Spring.....	1
7	Control Top or Remote Control Gasket.....	1
8	Control Cover.....	1
9	1st & Reverse Rocker Arm.....	1
10	1st & Reverse Shift Fork & Rail Assembly.....	1
11	Rear Rail Support.....	1
12	Rear Rail Support Capscrew Lockwasher.....	2
13	Rear Rail Support Capscrew.....	4
14	Front Rail Support Capscrew.....	4
15	Front Rail Support Capscrew Lockwasher.....	4
16	Front Rail Support.....	1
17	2nd & 3rd, 4th & 5th Shift Fork Bushing.....	4
18	4th & 5th Shift Fork & Rail Ass'y (Includes Item #17).....	1
19	2nd & 3rd Shift Fork & Rail Ass'y (Includes Item #17).....	1
20	Interlock Cross Pin.....	1
21	Interlock Tapered Pin Support.....	2
22	Interlock Tapered Pin.....	2
23	1st & Reverse Shift Rail.....	1
24	Mesh Lock Poppet Rails.....	4
25	Poppet Springs.....	4
26	Reverse Latch Plunger.....	1
27	Plunger Spring.....	1
28	Plunger Spring Retaining Plug.....	1
29	Control Top or Remote Control Capscrew.....	4



## 390V/CL550 SERIES ASSEMBLY INSTRUCTIONS

Minimum endplay on mainshaft gears:  
 • mainshaft first gear - .010 [0,25]  
 • all others - .006 [0,15]

Apply a thin coat of Loctite 510 to the O.D. of all oil seals before assembly.

Check all mainshaft constant-mesh gears to make sure they rotate freely on mainshaft.

Rotate both tapered bearings with forward and rear pressure to seat brg. cones before checking endplay.

Tighten .5625-18 thd. nut and studs 60 to 80 Lb. Ft. [81,4-108,4 N-m]

Tighten 15 to 20 Lb. Ft. [20,4-27,1 N-m] 4 screws

30° Approx

Install clutch return spring clips as shown when required.

Shim here to obtain .002-.008 [0,06-0,20] endplay on main drive gear when mainshaft rear bearing cup assembly is tightly clamped to rear face of case. Coat both sides of each shim with Loctite 510 before final assembly.

Tighten 2 screws to maximum torque of 5 Lb. Ft. [6,7 N-m].

Tighten .6250-11 bolts 80 to 100 Lb. Ft. [108,5 - 135,5 N-m]

4th and 5th shift hub sleeve

Short teeth to front of transmission.

Large chamfered side of hub to be put on the shaft first.

Smooth ground surface next to needle thrust bearing.

Unless otherwise specified: Tighten all capscrews 20 to 25 Lb. Ft. [27,2 - 33,8 N-m]

Hand-spin idle gear and countershaft assemblies after each is installed on their bearings in transmission case. Both must spin freely and smoothly.

Use Grade #2 Multi-Purpose Grease to retain needle rollers in gear bores during assembly.

Use MIL-L-21260B oil to spigot bearing rollers after assembly in gear pocket.

When screws with pre-applied thread-locking compound are removed after initial assembly, clean threads thoroughly and apply Loctite "262" Thread-Lock before re-installation.

Tighten 4 screws 35 to 45 Lb. Ft. [47,5-61,0 N-m]

Tighten flange nut 400 to 450 Lb. Ft. [542-610 N-m]

Coat gaskets on both sides or coat both mating surfaces with Loctite 510 before assembly.

Tighten P.T.O. cover screws, 6 each side, 10 to 15 Lb. Ft. [13,6-20,3 N-m]

These screws must not be over tightened to avoid cover & gasket damage.

When installing control assembly, install & tighten center rear screw first, center front screw second & then remaining screws.

P.T.O. cover gaskets to be installed dry.


Tighten drain and filler plug 30 to 40 Lb. Ft. [40,7 - 54,3 N-m] when plain plugs are used. When plugs with pre-applied sealant are required, tighten 20 to 25 Lb. Ft. [27,2 - 33,8 N-m]

## OVERHAUL OF TRANSMISSION ASSEMBLY


The instructions contained herein cover the disassembly and reassembly of the transmission in a sequence that would normally be followed after the unit has been removed from the machine and is to be completely overhauled.

**CAUTION:** Cleanliness is of extreme importance and an absolute must in the repair and overhaul of this unit. Before attempting any repairs, the exterior of the unit must be thoroughly cleaned to prevent the possibility of dirt and foreign matter entering the mechanism


### DISASSEMBLY OF THE TRANSMISSION:

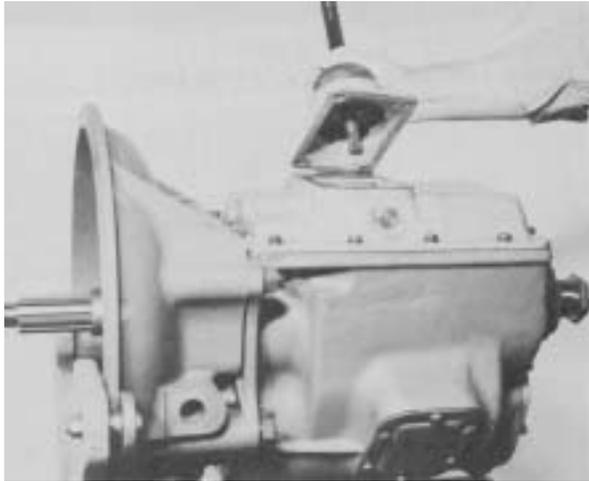


**Figure 1**- Remove shift lever control top or remote control assembly.

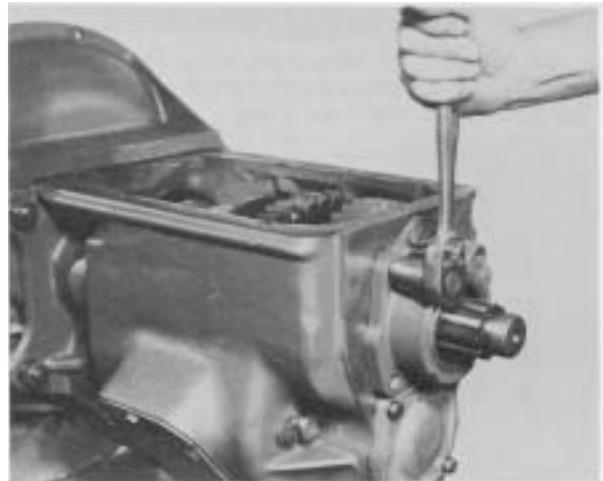

**Figure 3** - Remove rear mainshaft bearing cap bolts.

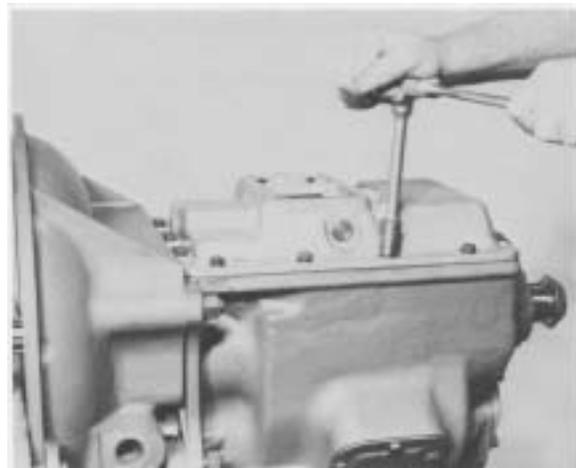

**Figure 2**-Remove control cover capscrews and control cover.

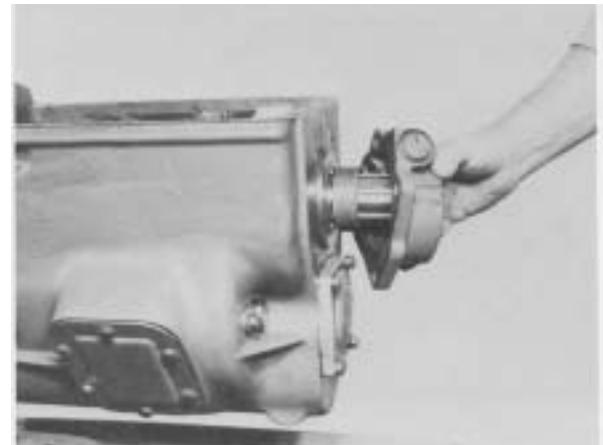

**Figure 4** - Remove rear mainshaft bearing cap and speedometer drive gear.




**Figure 5** - Tap on main drive gear to move mainshaft to the rear about ¼" [6,35 mm]. Use pry bars as shown to remove rear bearing cup and locating ring.



**Figure 8** - Remove main drive gear and bearing assembly.



**Figure 6** - Remove main drive gear cap bolts.

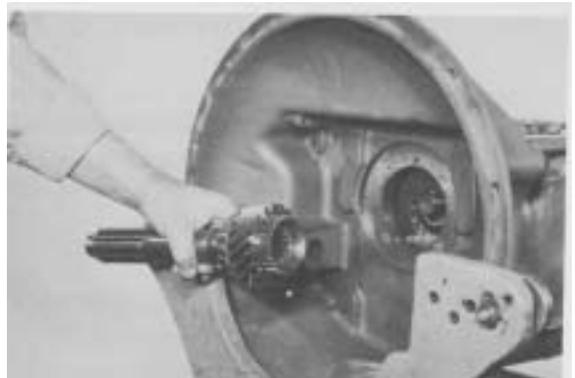

**Figure 9** - Using a hoist (if available) and a heavy rope, lift mainshaft assembly from transmission case. Mainshaft can be removed by hand, but is quite difficult to handle.



**Figure 7** - Using a soft hammer, tap on threaded end of mainshaft. Move mainshaft toward main drive gear. From front of transmission, remove main drive gear bearing cap and shims.



**Figure 10** - Remove reverse idler lock and countershaft rear bearing cap bolts.




**Figure 11** - Remove countershaft rear bearing cap.



**Figure 14** - Remove countershaft rear bearing retainer ring.



**Figure 12** - Using a suitable puller, remove reverse idler shaft.

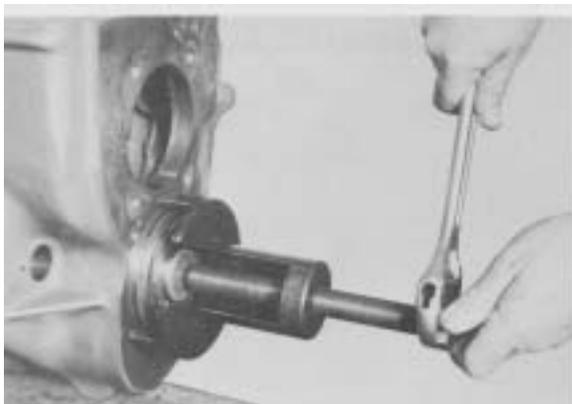


**Figure 15** - Pry countershaft to the rear. Using a suitable puller, remove countershaft bearing



**Figure 13** -Remove reverse idler gear and thrust washers.  
NOTE: Idler gear has loose needle rollers in it. Do NOT lose these rollers.




**Figure 16** - Countershaft rear bearing removed. Note oil baffle position. Remove oil baffle.

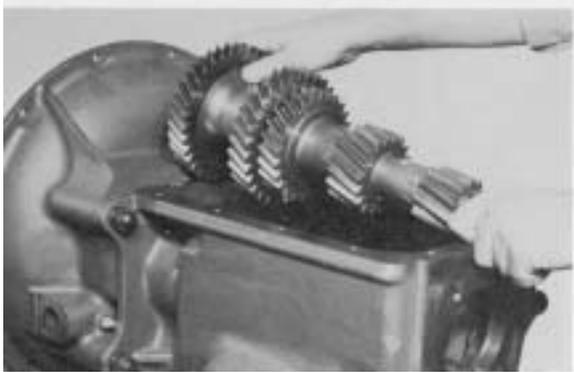

**Figure 17** - Remove countershaft assembly from transmission case. Countershaft front pilot bearing has lose needle rollers. Use caution as NOT to lose these rollers.



**Figure 20** - Remove shift hub thrust bearing and bearing race.

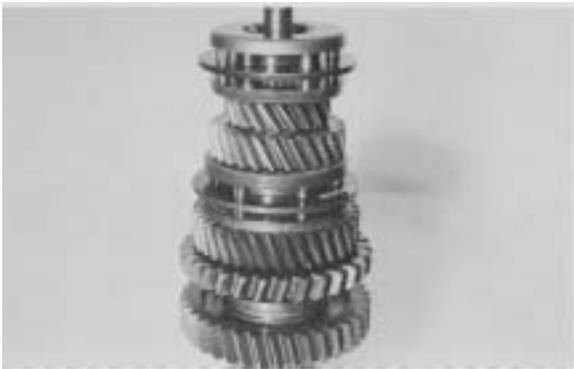

**Figure 18** - Position mainshaft in a suitable stand. A vise may be used if soft jaw are utilized.



**Figure 21** - Remove 4th & 5th shift hub sleeve and 4th speed synchronizer cup.




**Figure 19** - Remove 5th speed synchronizer cup and 4th & 5th speed synchronizer assembly.



**Figure 22** - Remove 4th speed gear. Use caution as NOT to lose needle rollers under gear.

**NOTE:** Units built before serial number 045451YJ will not have needle rollers under 3rd & 4th speed mainshaft gears.

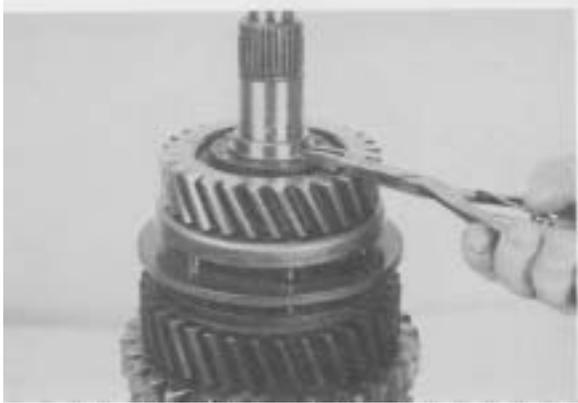

**Figure 23** - Remove 3rd gear retaining ring.



**Figure 24** - Remove 3rd gear thrust washer. Use caution as NOT to lose lock ball.




**Figure 25** - Remove 3rd speed gear. Use caution as NOT to lose needle rollers under gear.

**NOTE: Units built before serial number 045451YJ will not have needle rollers under 3rd & 4th speed mainshaft gears.**




**Figure 26** - Remove 3rd gear synchronizer cup and synchronizer assembly. NOTE: There is a variation in the mainshaft 1st gear retention. One version has a split washer and a split washer retainer ring. Using a three-legged puller (as shown in Figure 27), pull against split washer retainer ring to remove rear bearing

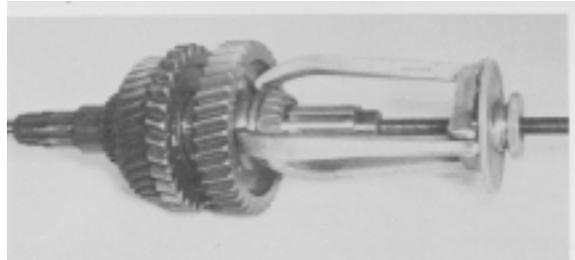

**Figure 27** - Remove mainshaft rear bearing, as shown. (See Note after Figure 26).

The other version mainshaft 1st gear retention is a thrust washer between 1st gear and the rear bearing. In this version, there is not enough room to get a puller behind the thrust washer and it will be necessary to pull on the 1st gear (as shown in Figure 28).

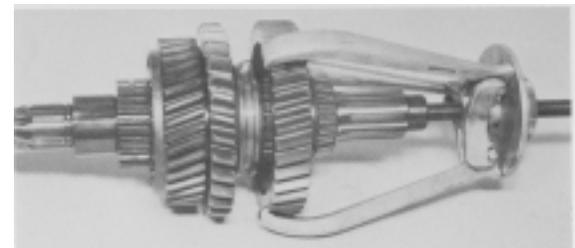

**Figure 28** - Remove rear mainshaft bearing and 1st gear, as shown. Use caution as NOT to lose needle rollers under 1st gear. (See Note after Figure 26).



**Figure 29** - Remove rear bearing and split washer retainner ring.



**Figure 30** - Remove 1st gear split washer



**Figure 31** - Remove 1st gear. Use caution as NOT to lose needle rollers under 1st gear. 1st gear was removed in Figure 28 for thrust washer retention. Further disassembly of the mainshaft will be identical in both versions.




**Figure 32** - Remove 1st & Reverse shift hub sleeve retainner ring.



**Figure 33** - Remove shift hub and sleeve.



**Figure 34** - Remove reverse gear. Use caution as NOT to lose needle rollers under reverse gear.

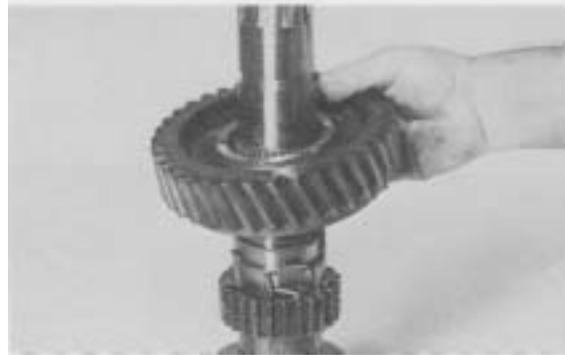

**Figure 37** - Remove 2nd gear. Use caution as NOT to lose needle rollers under 2nd gear.

**See Cleaning and Inspection Section, Page 24.**

### **MAINSHAFT REASSEMBLY**



**Figure 35** - Remove 2nd gear split washer retainer ring.



**Figure 38** - With clutching teeth of 3rd gear down, coat inside diameter of gear with a high quality heavy grease. This will hold needle rollers in position while assembling. Lay up first row of needle rollers.

**NOTE: Units built before serial number 045451YJ will not have needle rollers under 3rd & 4th speed mainshaft gears.**



**Figure 36** - Remove 2nd gear split washer. CAUTION: Do NOT lose locating ball. This is to prevent split washer from spinning.




**Figure 39** - Position roller spacer on first row of rollers.



**Figure 40** - Lay up second row of needle rollers.



**Figure 41** - Position outer roller spacer on second row of rollers. Grease rollers to hold in place.

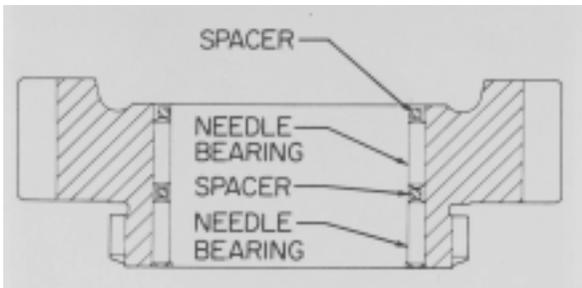

**Figure 42**



**Figure 43** - Using caution as NOT to catch the needle rollers on the edge of a spline or snap ring groove, install 3rd gear on mainshaft.



**Figure 44** - Install 3rd speed thrust washer lock ball, washer and washer retainer ring.  
**NOTE: Thrust washer for units with needle bearings under 3rd gear is thicker than washer for units without needle bearings under 3rd gear. (.280/.282 with needles, .240/.238 without needles).**



**Figure 45** - Turn mainshaft over. Install 3rd gear synchronizer cup and 2nd & 3rd synchronizer assembly.




**Figure 46** - With clutching teeth of 2nd gear down, coat inside diameter of gear with a high quality heavy grease. This will hold needle rollers in position while assembling. Lay up first row of needle rollers.



**Figure 49** - Position outer roller spacer on second row of rollers. Grease rollers to hold in place.



**Figure 47** - Position roller spacer on first row of rollers.

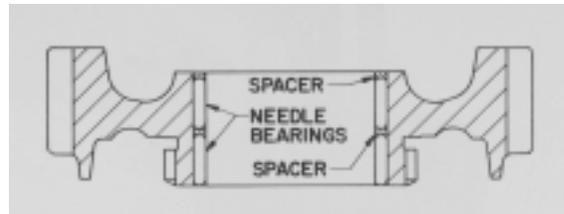

**Figure 50**




**Figure 48** - Lay up second row of needle rollers.




**Figure 51** - Using caution as NOT to catch the needle rollers on the edge of a spine or snap ring groove install 2nd gear on mainshaft.




**Figure 52** - Position 2nd gear split washer locating ball in shaft. Install split washer in washer groove with ends of washer together at locating ball.

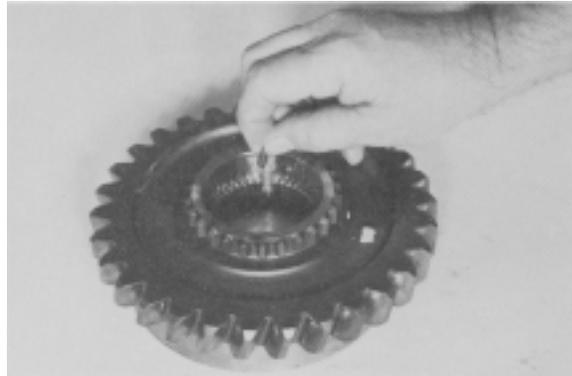

**Figure 55** - Lay up first row of needle rollers on spacer.

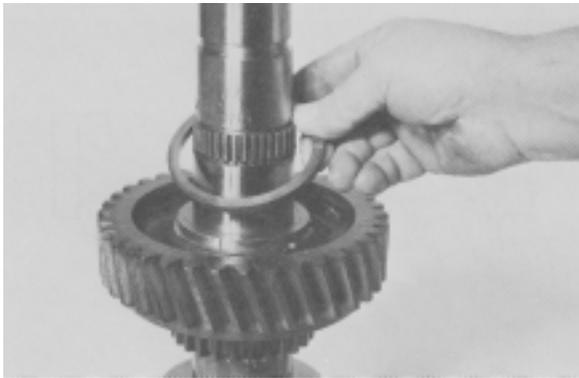


**Figure 53** - Install split washer retainer ring over split washer.

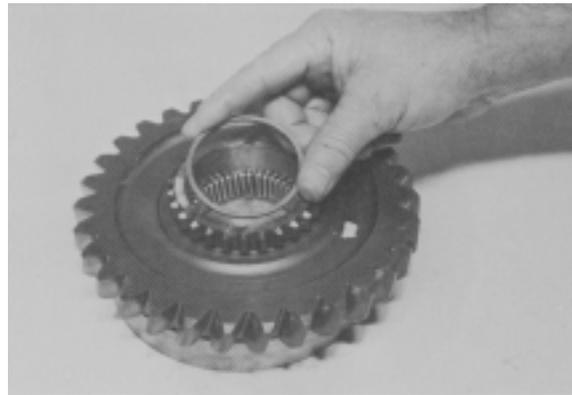


**Figure 56** - Position roller spacer on first row of rollers.



**Figure 54** - With clutching teeth of Reverse gear up, coat inside diameter of gear with a high quality heavy grease. This will hold needle rollers in position while assembling. Insert one roller spacer.

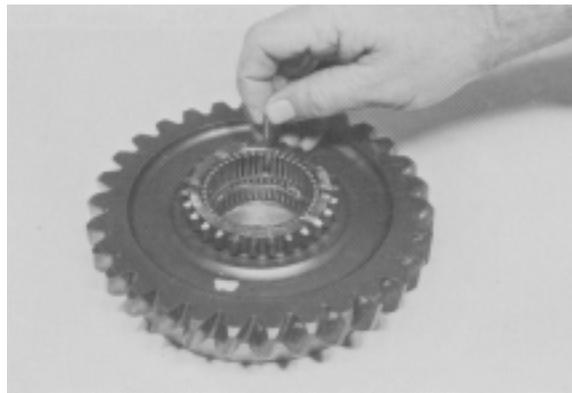


**Figure 57** - Lay up second row of needle rollers. Grease rollers to hold in place.

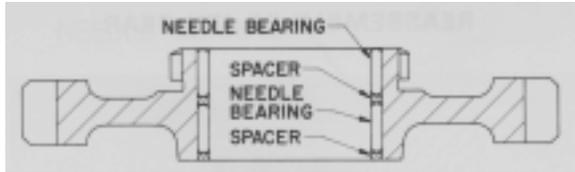

REVERSE

**Figure 58**

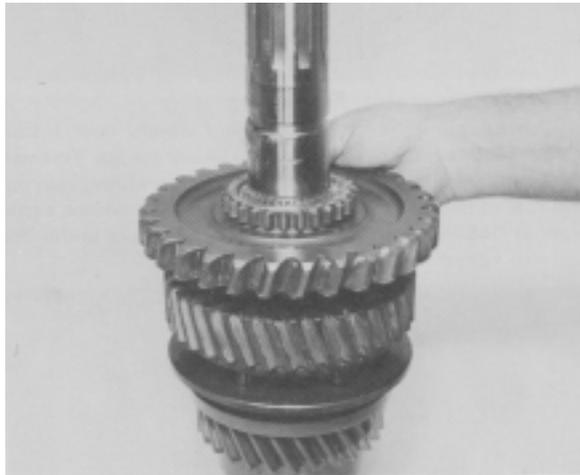


**Figure 59** - Using caution as NOT to catch the needle rollers on the edge of a spline or snap ring groove, install Reverse gear on mainshaft.




**Figure 60** - Position 1st and Reverse shift hub sleeve and hub on mainshaft. NOTE: Counterbore in shift hub sleeve must be up.



**Figure 61** - Install shift hub sleeve retainer ring.

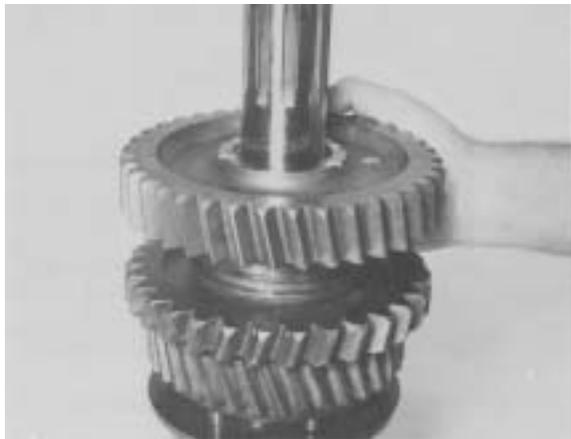


**Figure 62** - With clutching teeth of 1st gear down, follow same procedure used in Figures 54 thru Figure 57 to install needle rollers and spacers. Install 1st gear on mainshaft.

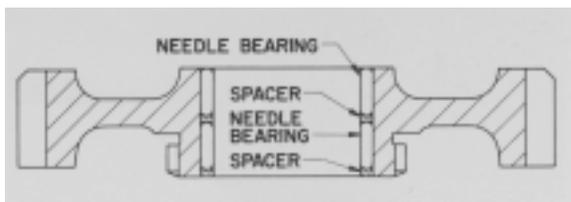


1st GEAR

**Figure 63**

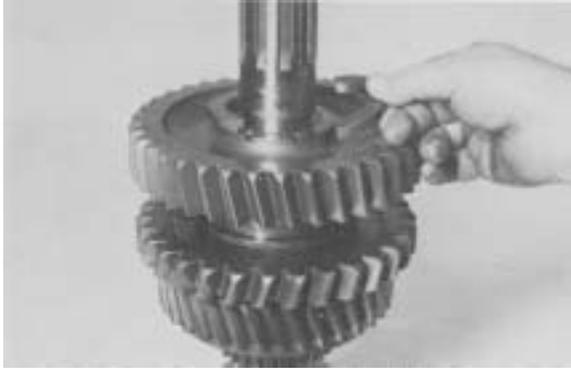


**Figure 64** - Position 1st gear split washer in groove of mainshaft. NOTE: If a 1st gear thrust washer is used in place of the split washer, position thrust washer on shaft and proceed with Figure 66.

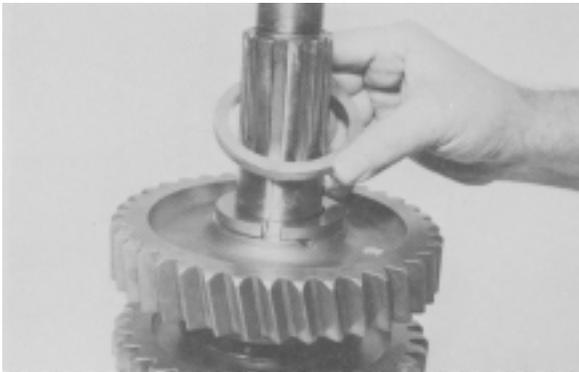

**Figure 65** - Install split washer retaining ring over split washer.



**Figure 66** - Using a suitable bearing driver and soft hammer install mainshaft rear taper bearing. Be certain bearing race is tight against split washer.

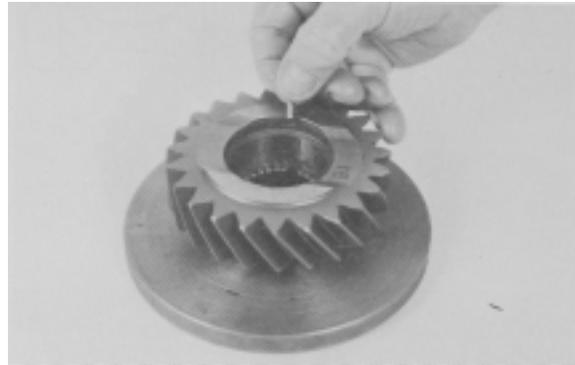

**Figure 67** - With clutching teeth of 4th gear down, coat inside diameter of gear with a high quality heavy grease. This will hold need rollers in position while assembling. Lay up first row of needle rollers.


**NOTE: Units built before serial number 045451YJ will not have needle rollers under 3rd & 4th speed mainshaft gears.**



**Figure 68** - Position roller spacer on first row of rollers.



**Figure 69** - Lay up second row of needle rollers.

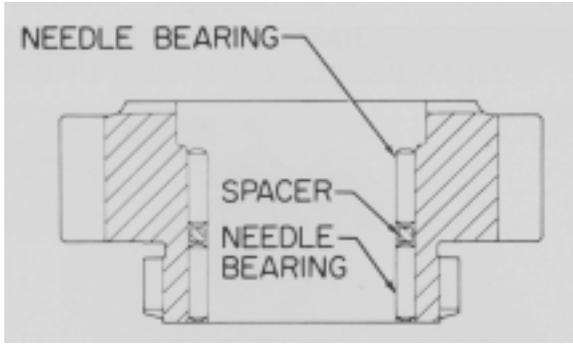


4th GEAR

**Figure 70**



**Figure 73** - Install 4th & 5th synchronizer assembly and 5th speed synchronizer cup on shaft.

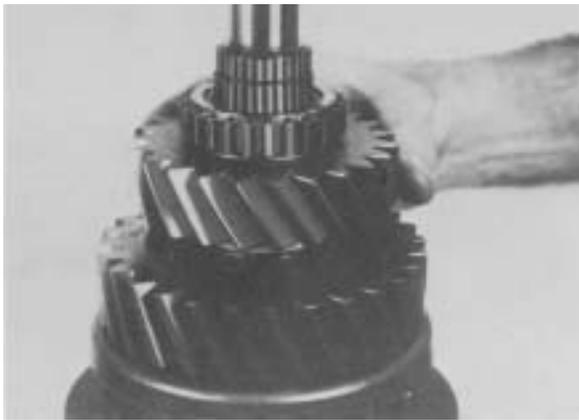

**Figure 71** - Turn gear over and using caution as NOT to catch the needle rollers on the edge of shaft, install 4th speed gear.




**Figure 74** - Grease thrust bearing and install bearing and bearing race on mainshaft.




**Figure 72** - Position 4th gear synchronizer cup on clutching teeth of 4th gear. NOTE: Chamfer on I.D. of 4th & 5th shift hub sleeve must go down. Install shift hub sleeve on shaft.



**Figure 75** - Mainshaft assembly complete.

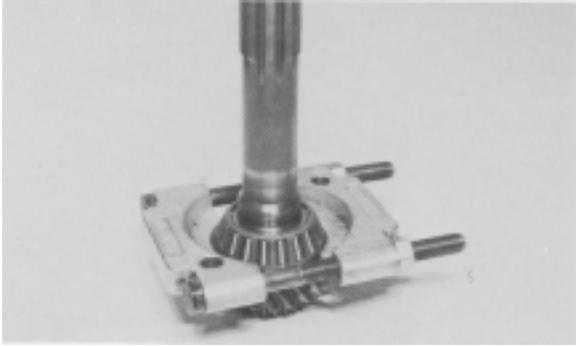

**Figure 76** - If main drive gear taper bearing is to be removed (split puller shown in Figure 76) is recommended.

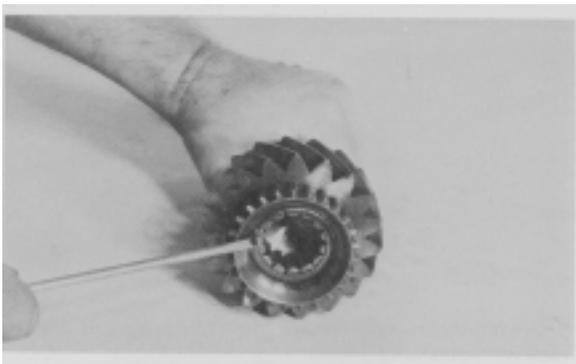


**Figure 77** - Remove pilot bearing washer retainer ring. Remove bearing washer. Use caution as NOT to lose roller bearings.


### MAIN DRIVE GEAR REASSEMBLY



**Figure 78** - Press new taper bearing on drive gear. Turn gear over. Using a high quality heavy grease, coat roller bearing surface. Place rollers in grease as shown.

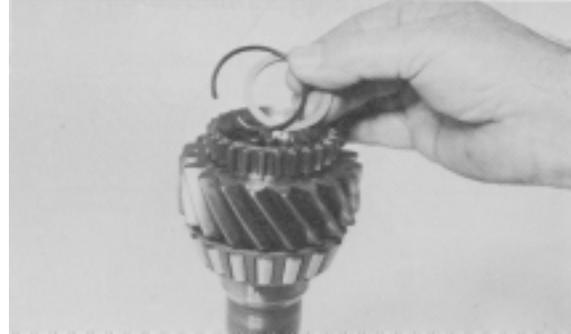

**Figure 79** - Install roller bearing washer and retainer ring.

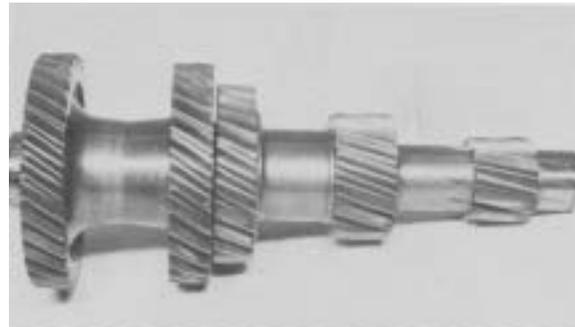

**Figure 80** - If the countershaft, drive gear or 4th gear is to be replaced (Figure 80 shows direction of drive gear and 4th gear hubs).




**Figure 81** - If countershaft front bearing is to be replaced, remove clutch housing and drive front bearing from transmission case. Apply a light coat of Loctite 510 on the outer diameter of the new bearing. Install in transmission case as shown with end of bearing .001-.007 below the face of case. Clutch housing is reassembled temporarily on transmission case to facilitate reassembly of transmission, but will be removed again later on to set mainshaft taper bearing end play.


## ROUND RAIL SHIFT CONTROL DISASSEMBLY



**Figure 82** - Remove front and rear rail support cap-screws.

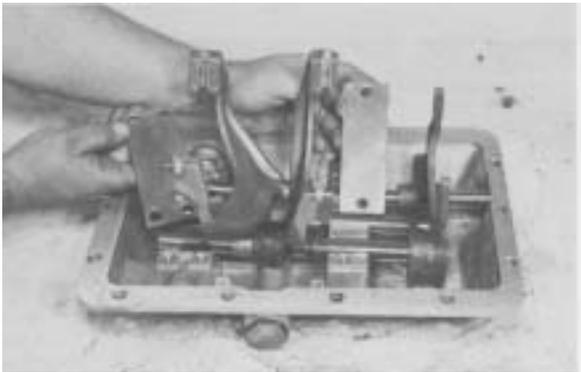


**Figure 83** - Remove front and rear rail supports.

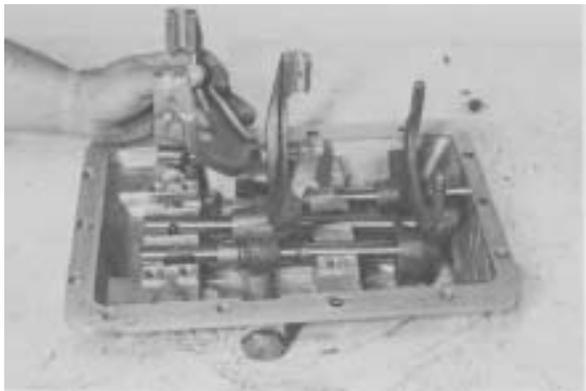

**Figure 84** - Remove the 4th & 5th shift fork and rail assembly.




**Figure 85** - Remove 2nd & 3rd shift fork and rail assembly. CAUTION: Do NOT lose interlock cross pin.

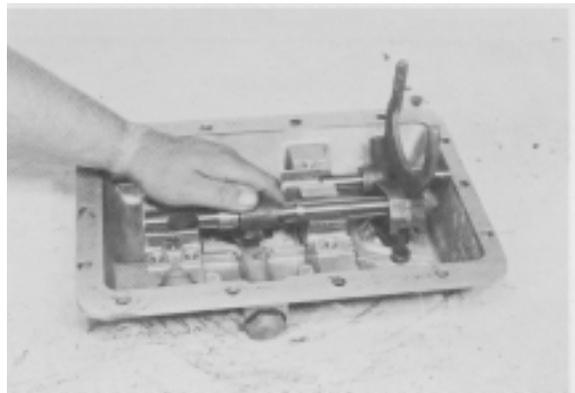

**Figure 86** - Remove 1st & Reverse shift fork, rail and lug assembly.



**Figure 87** - Using a small magnet, remove the 1st & Reverse shift fork rod lock pin.

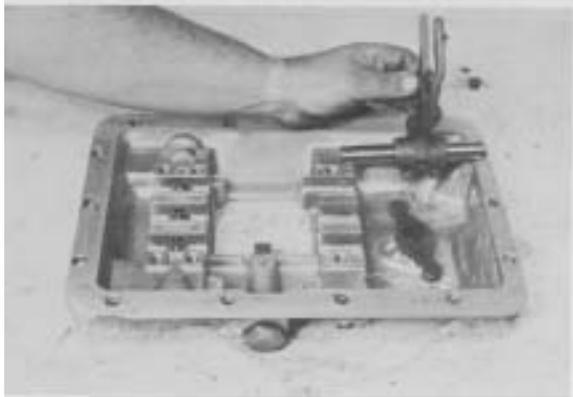


**Figure 88** - Remove 1st & Reverse shift fork and rail assembly.



**Figure 91** - If the 2nd, 3rd, 4th or 5th shift fork bushing is to be replaced, remove worn bushings from fork. Install new bushing and bend bushing tab over top and bottom of fork.




**Figure 89** - Remove 1st & Reverse rocker arm.

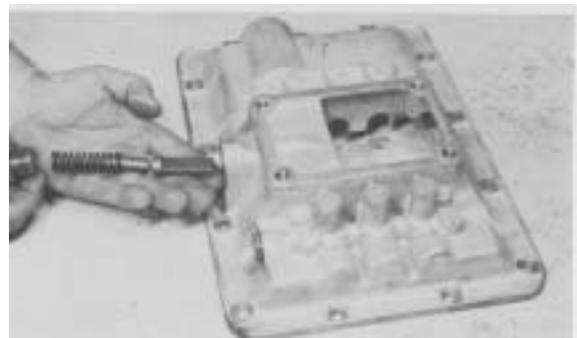


**Figure 92** - Remove reverse latch plunger, pin and spring.

**See Cleaning and Inspection Section, page 30.**


**REASSEMBLY**

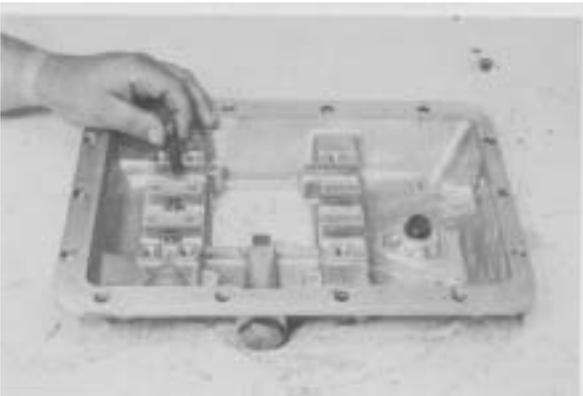


**Figure 90** - Remove mesh lock spring and lock ball, 3 each. Remove crossover interlock balls, 4 each.

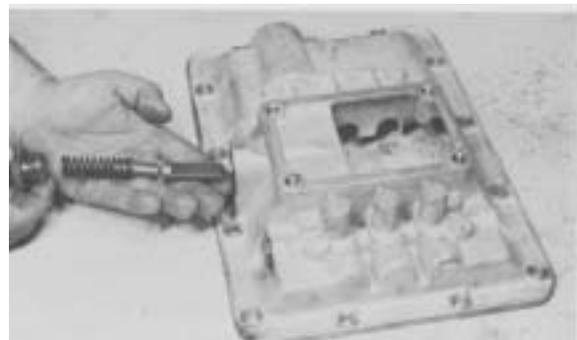


**Figure 93** - Install reverse latch plunger, spring, pin and plunger spring plug.

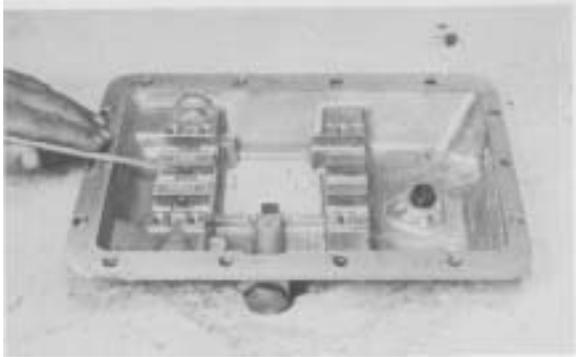


**Figure 94** - Position crossover interlock balls in cover cross bores. (2) balls in cover cross bore between 1st & Reverse rail groove, and 2nd & 3rd rail groove, and (2) balls in cover cross bore between 2nd & 3rd rail groove, and 4th & 5th rail groove. (See Figure 94-A).

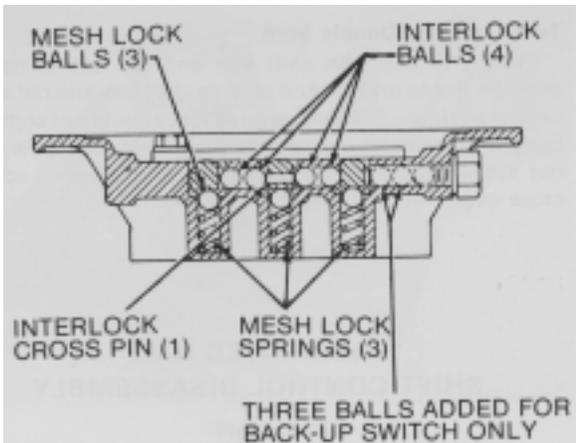


**Figure 94-A**

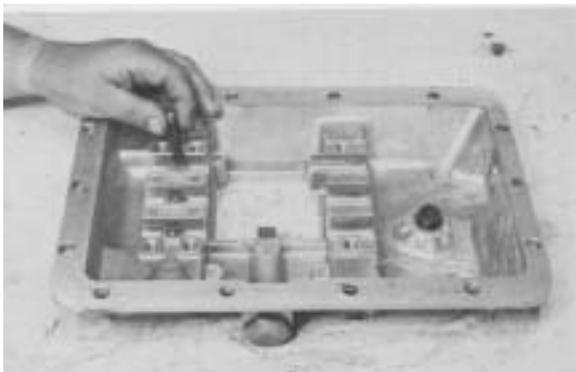


**Figure 95** - Position the mesh lock spring and ball, 3 each, in spring pockets. (See Figure 94-A).

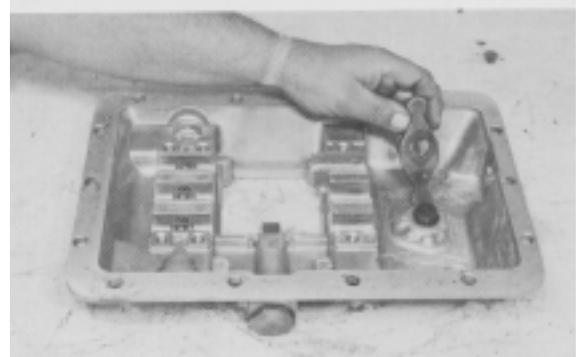

**Figure 96** - Position 1st & Reverse rocker arm on pivot pin.

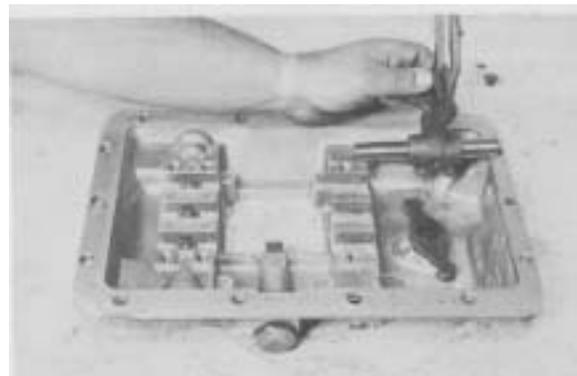


**Figure 97** - Install 1st & Reverse shift fork and rail assembly in control housing. Install shift rail lock pin to position rail in control housing.

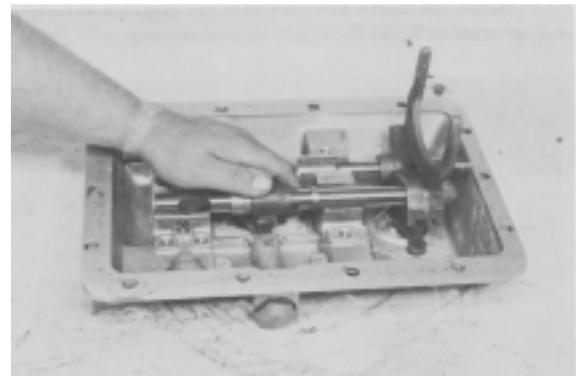


**Figure 98** - Install 1st & Reverse shift lug, rocker lug, shift rail and spacers in rail groove over mesh lock ball and spring. NOTE: Position widest spacer between shift lug and front support. (2) narrower spacers between the shift lug and center support.



**Figure 99** - Install interlock cross pin in 2nd & 3rd shift rail. Position 2nd & 3rd shift rail and fork assembly in rail groove over mesh lock ball and spring. Make certain cross pin is in position in rail. (See Figure 94-A).

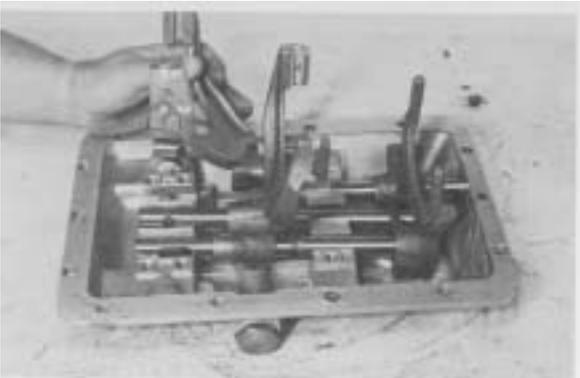

**Figure 100** - Position the 4th & 5th shift rail and fork assembly in rail groove over mesh lock ball and spring.

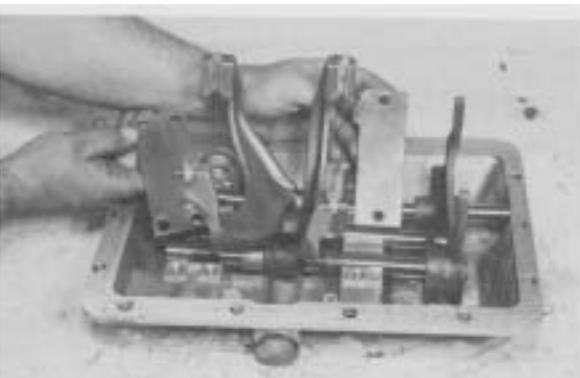

**Figure 101** - Position front rail support over shift rails and install cap screws. Position rear support over rails and install cap screws.



**Figure 102** - Tighten support cap screws 20 - 25 ft.lbs. torque [27,2 - 33,8 N.m].


#### **Test Cover for Double Shift**

Pry 4th & 5th shift fork and rail out of neutral position. Try to pry 1st & Reverse shift fork and rail out of neutral position. 1st & Reverse fork should NOT shift. If it does, interlock cross pin or interlock cross over balls were not assembled correctly. Disassemble cover and correct cross over. (See Figure 94-A).


#### **FABRICATED RAIL SHIFT CONTROL DISASSEMBLY**




**Figure 103** - With control cover in neutral, pry 4th & 5th shift fork to 4th speed position (toward the rear of cover).

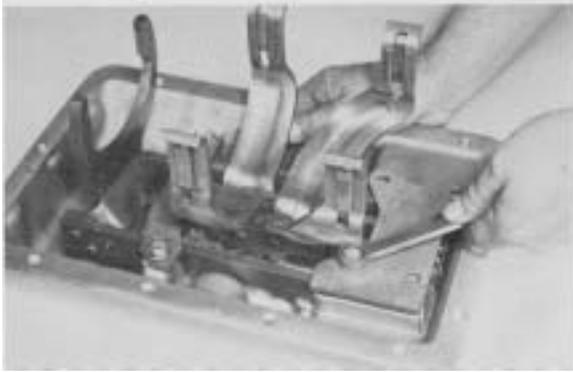


**Figure 104** - Remove front rail support cap screws.

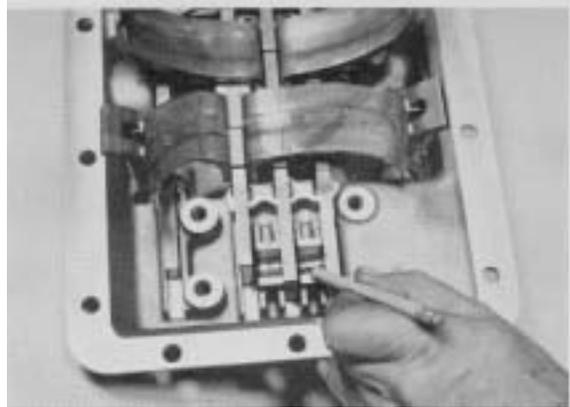


**Figure 107** - Note position of interlock tapered pins for reassembly.

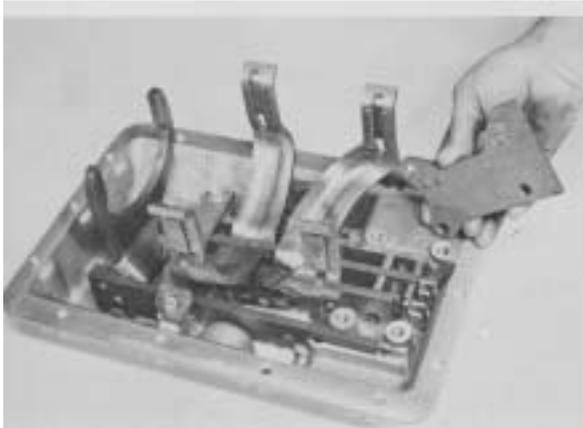


**Figure 105** - Remove front rail support.

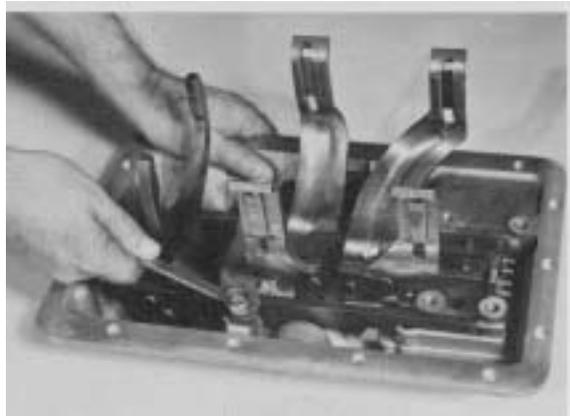


**Figure 108** - Remove rear rail support cap screws.

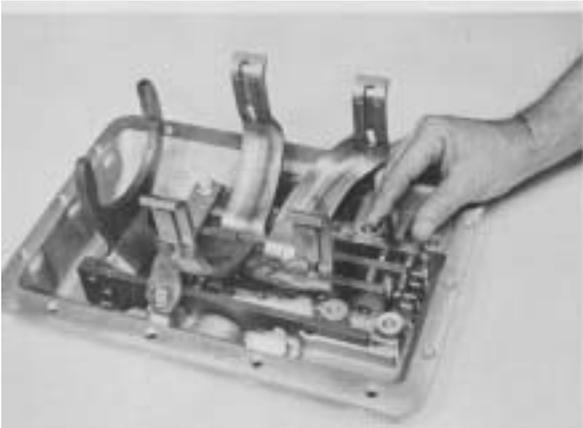


**Figure 106** - Remove interlock tapered pin supports.

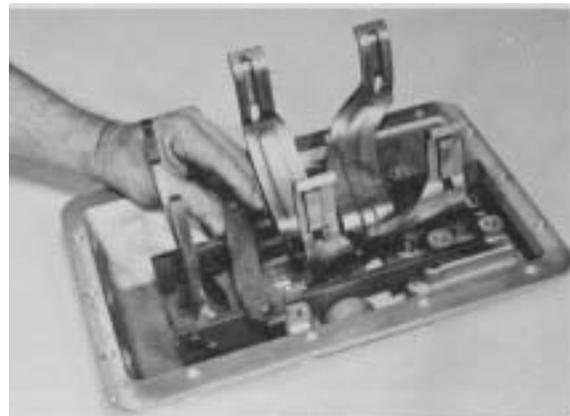


**Figure 109** - Remove rear rail support.

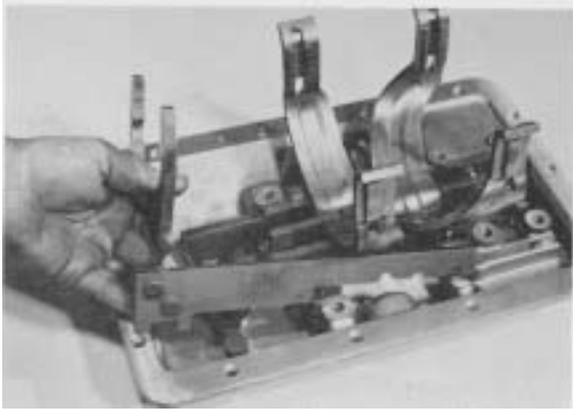

**Figure 110** - Remove 1st & Reverse shift fork and rail assembly.

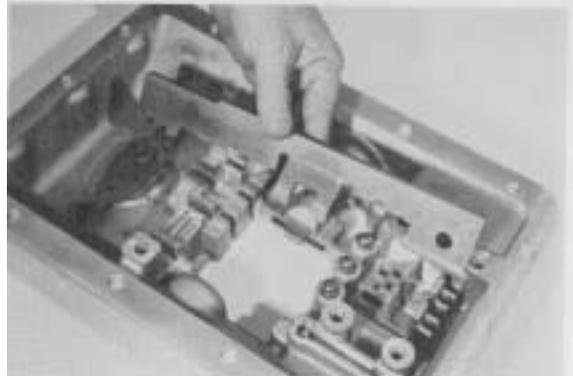

**Figure 113** - Remove 1st & Reverse shift rail.

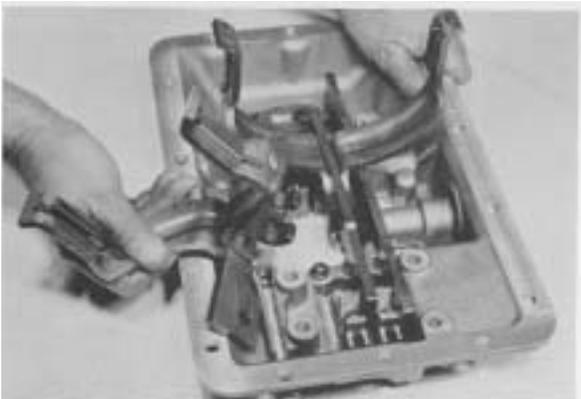

**Figure 111** - Remove 4th, 5th, 2nd & 3rd shift fork and rail assembly (See caution in Figure 112).




**Figure 114** - Remove mesh lock poppet balls, quantity 4.



**Figure 112** - Use caution as NOT to lose interlock cross pin, interlock tapered pins or mesh lock poppet balls.



**Figure 115** - Remove poppet springs, quantity 4.

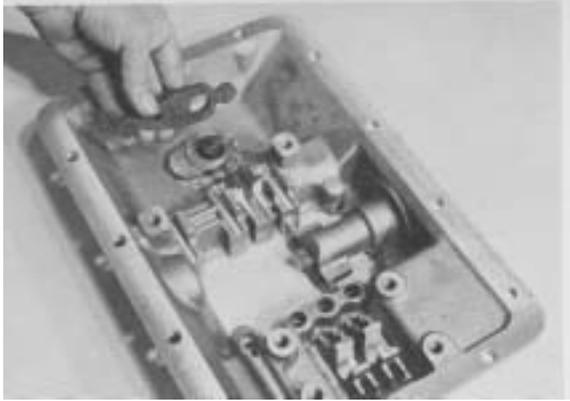


**Figure 116** - Remove 1st & Reverse rocker arm.




**Figure 117** - Remove reverse latch plunger spring retaining plug.




**Figure 118** - Remove reverse latch plunger spring and plunger.

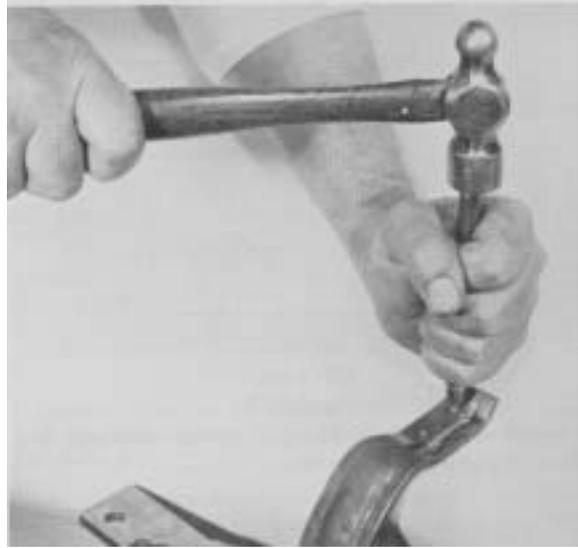

**Figure 119** - If fork bushings are worn, secure fork in a vise equipped with soft jaws and remove worn bushings with a drift. Install new bushings in fork. Turn fork over on anvil of vise and secure bushing in fork using a prick punch and upsetting bushing metal on outside of fork.

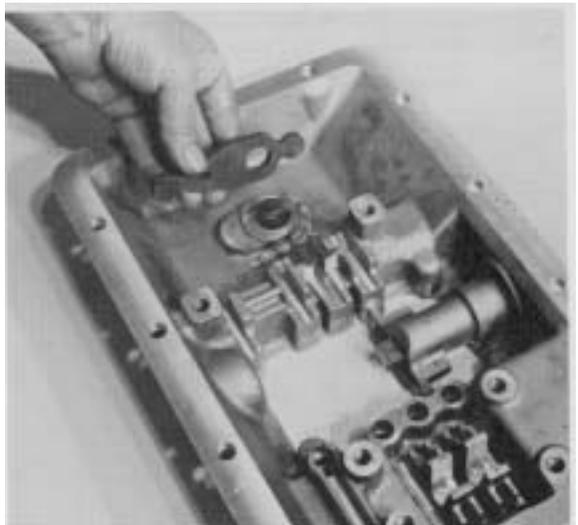


**Figure 120** - Position 1st & Reverse rocker arm on pivot pin as shown.

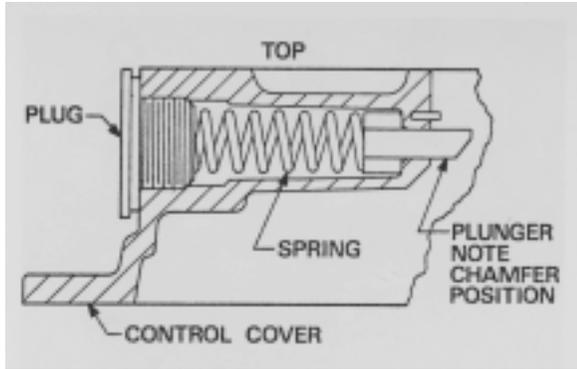

**Figure 121** - Install reverse latch plunger, spring and retaining plug. Tighten plug securely.




**Figure 124** - Align one tapered interlock cross pin with hole in 1st & Reverse shift rail. Position rail on poppet ball with rail in neutral position.

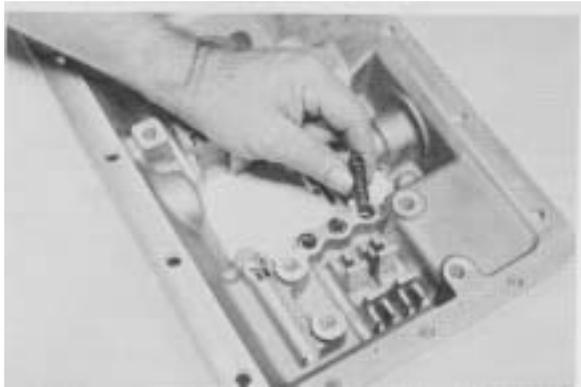

**Figure 122** - Install poppet springs, quantity 4.



**Figure 125** - Note position of tapered interlock cross pin in relation to rail.

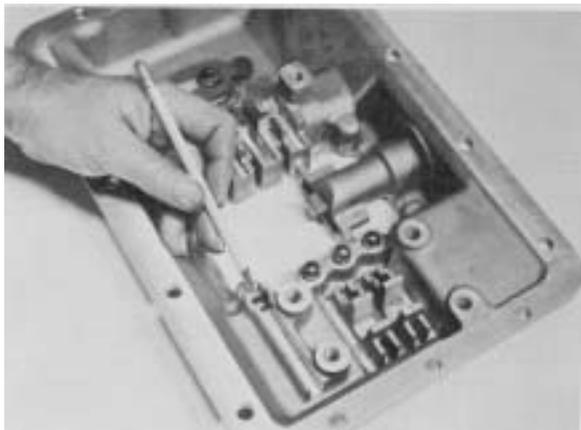

**Figure 123** - Install mesh lock poppet balls, quantity 4. Note 1st & Reverse shift fork rail poppet ball in pocket.



**Figure 126** - Install interlock cross pin in 2nd & 3rd shift rail.



**Figure 127** - Position 2nd & 3rd shift rail on poppet rail in neutral position with interlock pin aligned with 1st interlock tapered pin.



**Figure 128** - Install 2nd interlock tapered pin. Align pin with interlock cross pin hole.




**Figure 129** - Position 4th & 5th shift fork and rail on poppet ball in neutral.




**Figure 130** - Slightly raise rear of 4th & 5th shift rail and align 2nd interlock tapered pin with cross hole in 4th & 5th shift rail.




**Figure 131** - Note position of tapered interlock pins and shift rails.

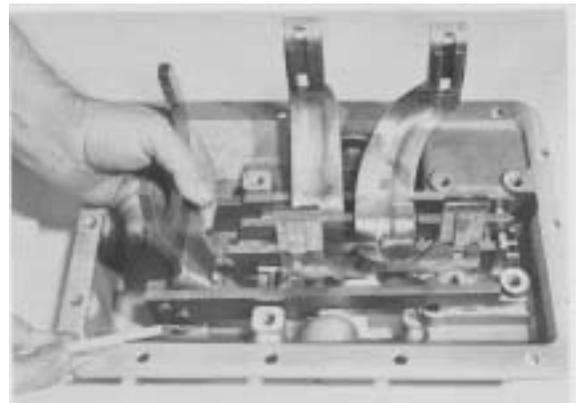


**Figure 132** - Install 1st & Reverse shift fork and rail assembly on poppet ball in a neutral position. Align 1st & Reverse rocker arm in notch at rear of rail as shown.

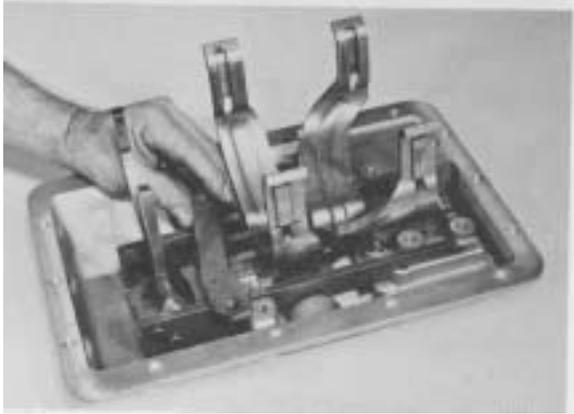


**Figure 133** - Position rear rail support

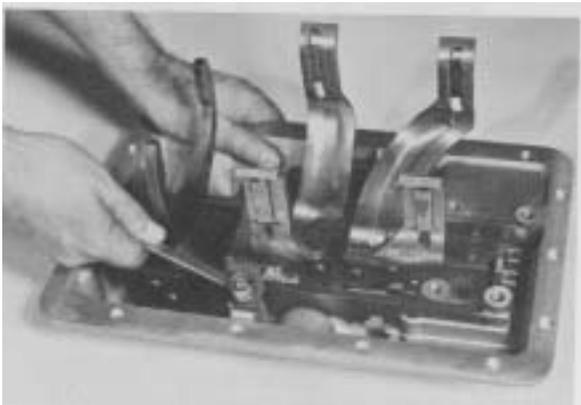


**Figure 134** - Install rail support cap screws and washers. Tighten cap screws slightly.

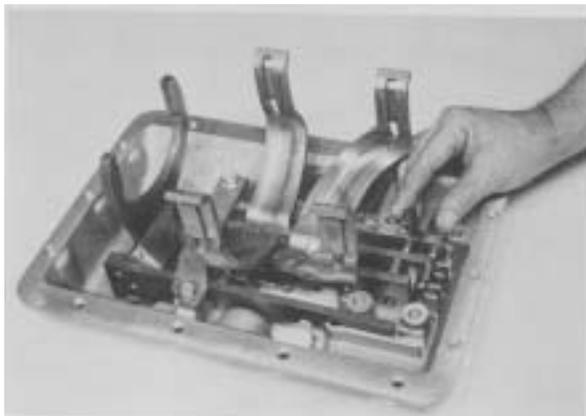


**Figure 135** - Install interlock tapered pin supports. Tap 4th & 5th shift fork to the rear. (4th speed position).

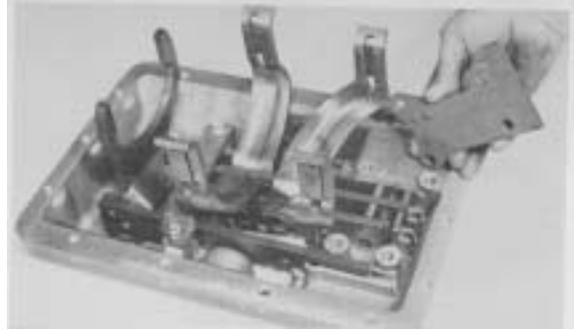

**Figure 136** - Position front rail support and install cap screws and washers.

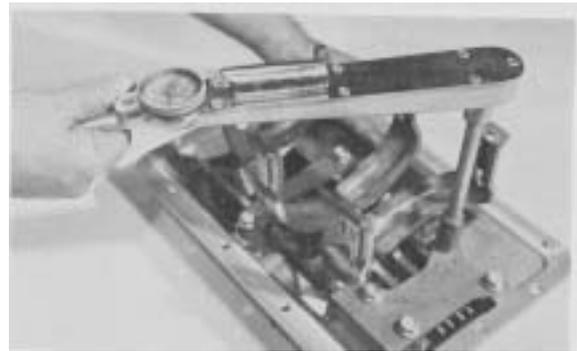

**Figure 137** - Tighten front and rear support cap screws 20-25 ft.lbs. torque [27,1 - 33,8 N.m.]. Tap 4th & 5th shift fork and rail assembly forward to a neutral position.

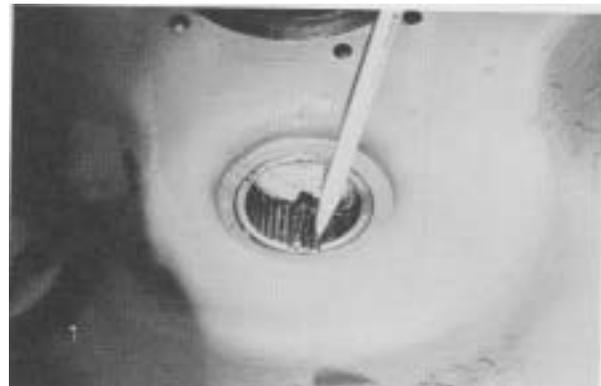

**Figure 138** - Coat countershaft pilot bearing needle rollers with heavy grease to hold in place until countershaft is installed.




**Figure 139** - Tip rear of countershaft down and into transmission case. Feed rear of countershaft through rear countershaft bearing bore. Move countershaft forward and into pilot bearing. **CAUTION:** Do NOT disrupt countershaft needle bearing.



**Figure 142** - Install countershaft rear bearing retainer ring.



**Figure 140** - Position rear bearing oil baffle as shown and start rear bearing.

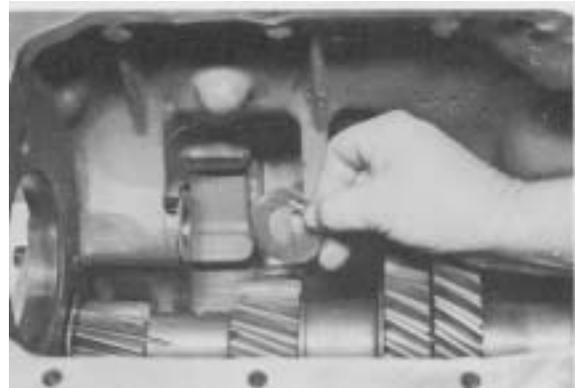

**Figure 143** - Use heavy grease on reverse idler thrust washers to hold in place. Position tang of washer in groove in housing.



**Figure 141** - Drive rear bearing on countershaft and into rear bearing bore. NOTE: Countershaft drive gear must be supported on each side with a 1/4" [6,35mm] flat bar to prevent damage to countershaft pilot bearing.



**Figure 144** - Coat inside diameter of reverse idler gear with high quality heavy grease. This will hold needle rollers in position while assembling. Insert one roller spacer.




**Figure 145** - Lay up first row of needle rollers in spacer.




**Figure 148** - Position roller spacer on second row of rollers. Grease rollers to hold in place.




**Figure 146** - Position roller spacer on first row of rollers.

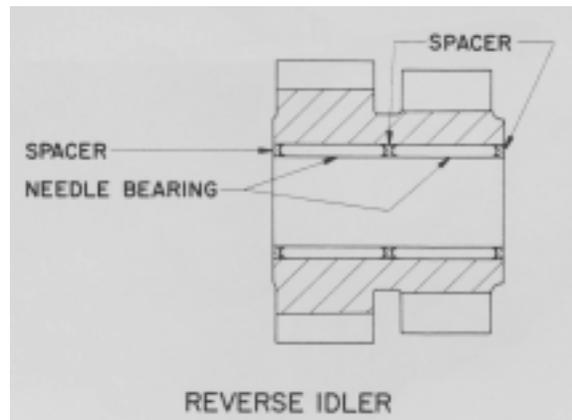

**Figure 149**

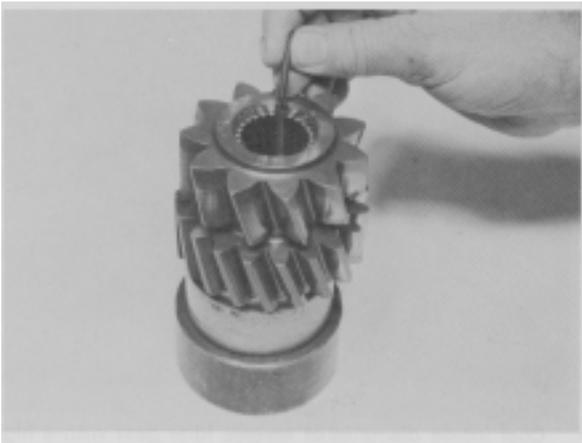

**Figure 147** - Lay up second row of needle rollers.

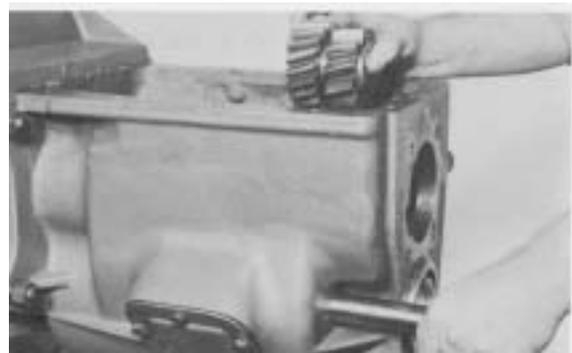

**Figure 150** - Carefully position reverse idler gear in housing. Use caution as NOT to disrupt needle rollers. Insert idler shaft through case and idler gear needle rollers. NOTE: Idler shaft lock groove MUST line up with lock screw hole. Drive shaft into position. Install shaft lock and capscrew.




**Figure 151**- Coat a new gasket on both sides with Loctite 510. Position gasket on countershaft bearing cap. Install bearing cap and bolts. Tighten bolts 20 - 25 ft.lbs. torque [27,2 - 33,8 N.m.]



**Figure 154** - Using a soft hammer, tap rear bearing cup until cup locating ring is against housing.




**Figure 152** - Install mainshaft assembly into transmission case as shown.

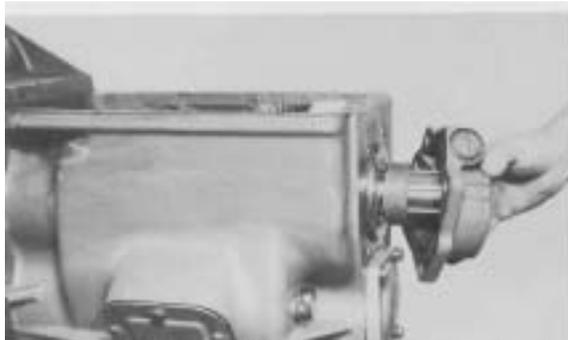

**Figure 155** - Coat O.D. of oil seal with Loctite 510 and press seal in mainshaft rear bearing cap with lip of seal down. Coat a new gasket on both sides with Loctite 510. Position gasket on mainshaft rear bearing cap. Use caution as not to cover oil return grooves in bearing cap. Install bearing cap with oil grooves lined up with oil holes in case.



**Figure 153** - Position mainshaft rear bearing cup in housing bore.

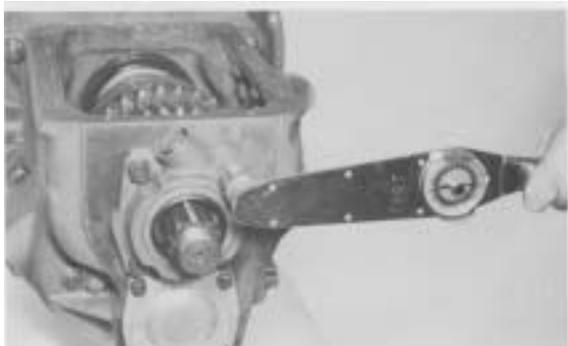

**Figure 156** - Install bearing cap bolts. Tighten bolts 35 - 45 ft.lbs. torque [47,5 - 61,0 N.m.].


## MINSHAFT TAPER BEARING ADJUSTMENT

The mainshaft rear taper bearing and main drive gear taper bearing must have a .002 to .008 [0,051-0,203mm] end play after assembly of transmission is complete.

The mainshaft rear taper bearing and bearing cup are not adjustable.

The main drive gear taper bearingcup is located in the main drive gear bearing cap. The taper bearing end play is regulated by shim pack between the bearing cap and transmission housing.

The following procedure is recommended to achieve a proper taper bearing end play.

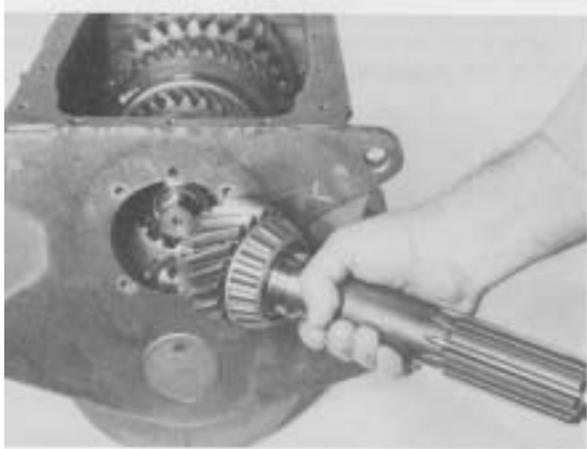

**Figure 157** - Remove transmission clutch housing. With main drive gear needle rollers in place and greased, position main drive gear in housing bore. Align clutching teeth on main drive gear with teeth in 5th speed synchronizer cup.




**Figure 158** - Coat O.D. of oil seal with Loctite 510 and install with lip of seal up in main drive gear bearing cap.




**Figure 159** - Position main drive gear bearing cap on main drive gear. Lube oil groove in cap at the top.



**Figure 160** - Install two capscrews 180 Degrees apart and torque screws to 15 inch lbs. [1.7 N.M.].

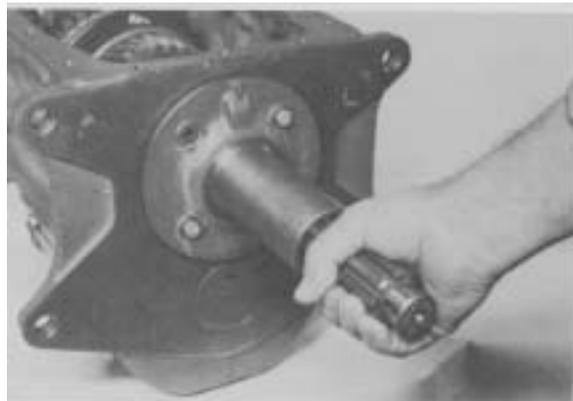

**Figure 161** - Turn main drive gear and mainshaft by hand back and forth to seat taper bearings.

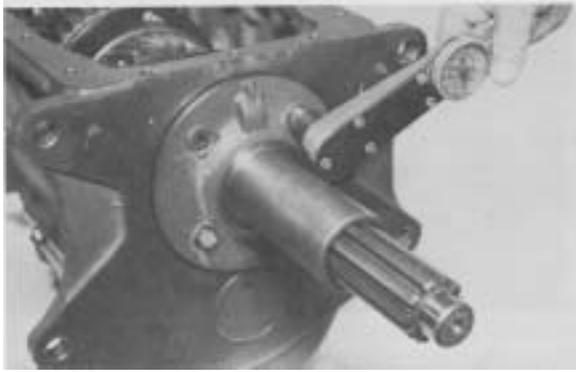


**Figure 162** - Recheck bearing capscrews and tighten to 30 inch lbs. torque [3,4 N.m.].




**Figure 165** - Using example .035 - .037 --average .036 + .016 = .052 shim pack, position shim pack and main drive gear bearing cap on main drive gear. Lube oil groove in bearing cap **MUST** be at the top.



**Figure 163** - Using a taper gauge at a capscrew, as shown, record gap between bearing cap and housing. Example: .035 [0,88mm].

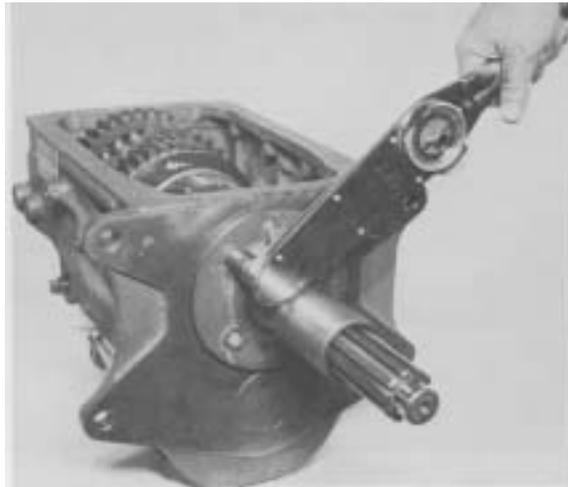

**Figure 166** - Install capscrews and tighten 15 - 20 ft.lbs. torque [20,4 - 27,1 N.m.].

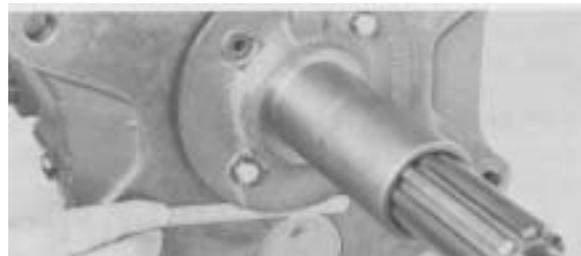

**Figure 164** - Using taper gauge at other capscrew as shown. Record gap. Example: .037 [0,93 mm] average between one capscrew and the other would be .036 [0,91mm]. Using .036 as the average gap between the bearing cap and housing add .016 [0,40 mm]. Example .036 + .016 will give a shim pack of .052 [1,32 mm]. This shim pack example would give a mainshaft end play of .002 - .008 [0,051 - 0,203 mm].




**Figure 167** - Place transmission in vertical position, with main drive gear pointing down. Install transmission output flange and torque the nut. Roll main drive gear and mainshaft to seat front and rear taper bearings. Position a dial indicator as shown. Pry on output flange to get mainshaft end play. End play must be between .002 - .008 [0,05 - 0,02]. Add shims for more end play or remove shims for less end play. **NOTE:** Each time a change is made, retorque stud nuts and roll mainshaft. Apply Loctite 510 to both sides of each shim.

Using the main drive gear bearing cap as an alignment guide, install the clutch housing to the transmission housing. Tighten stud nuts securely.

With new gasket in position and transmission in neutral, position control cover over gears, aligning shift forks in shift cover with gear shift hubs. If control cover is in neutral and transmission is in neutral, transmission drive gear should turn without output shaft turning.



**Figure 168** - When installing control assembly, install and tighten center rear screw first, center front screw second and then remaining screws. Tighten screws 20 - 25 ft. lbs. torque [27,1 - 33,8 N.m].

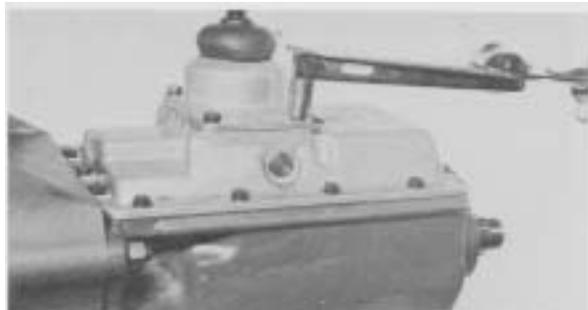

**Figure 169** - With special shift lever control top gasket in position install control top or remote control assembly on control cover. Tighten screws 20 - 25 ft. lbs. torque [27,1 - 33,8 N.m].

## CLEANING AND INSPECTION

### CLEANING

Cleaning all parts thoroughly using solvent type cleaning fluid. It is recommended that parts be immersed in cleaning fluid and moved up and down slowly until all old lubricant and foreign material is dissolved and parts are thoroughly cleaned.

**CAUTION:** Care should be exercised to avoid skin rashes, fire hazards, and inhalation of vapors when using solvent type cleaners.

### Housings:

Clean interior and exterior of housings, bearing caps, etc. thoroughly. Cast parts may be cleaned in hot solution tanks with mild alkali solutions providing these parts do not have ground or polished surfaces. Parts should remain in solution long enough to be thoroughly cleaned and heated. This will aid the evaporation of the cleaning solution and rinse water. Parts cleaned in solution tanks must be thoroughly rinsed with clean water to remove all traces of alkali. Cast parts may also be cleaned with steam cleaner.

**CAUTION:** Care should be exercised to avoid inhalation of vapors and skin rashes when using alkali cleaners.

All parts cleaned must be thoroughly dried immediately by using moisture-free compressed air or soft, lintless absorbent wiping rags free of abrasive materials such as metal filings, contaminated oil or lapping compound.

### INSPECTION

The importance of careful and thorough inspection of all parts cannot be overstressed. Replacement of all parts showing indication of wear or stress will eliminate costly and avoidable failures at a later date.

---

**Gears and Shafts:**

If magno-flux process is available, use process to check parts. Examine teeth on all gears carefully for wear, pitting, chipping, nicks, cracks, or scores. If gear teeth show spots where case hardening is worn through or cracked, replace with new gear. Small nicks may be removed with suitable hone. Inspect shafts to make certain they are not sprung, bent, or splines twisted, and that shaft are true.

**Housing, Covers, Etc.:**

Inspect housings, covers, and bearing caps to be certain they are thoroughly cleaned and that mating surfaces, bearing bores, etc., are free from nicks or burrs. Check all parts carefully for evidence of cracks or condition which would cause subsequent oil leaks or failures.

**Bearings:**

Carefully inspect all rollers and balls for wear, chipping or nicks to determine if any abnormal conditions exist. Causes of abnormal wear must be corrected before transmission is returned to service. Discard bearings.

**Oil Seals, Gaskets, Etc.:**

Replacement of spring load oil seals. "O"- rings, metal sealing rings, gaskets and snap rings is more economical when unit is disassembled than premature overhaul to replace these parts at a future time. Further, loss of lubricant through a worn seal may result in failure of other more expensive parts of the assembly. Sealing members should be handled carefully, particularly when being installed. Cutting, scratching, or curling under of lip of seal seriously impairs its efficiency.

---

## TROUBLESHOOTER'S TRANSMISSION CHECKLIST

### 1. NOISE ARISING IN NEUTRAL

Misalignment of transmission  
Worn transmission bearings  
Scuffed gear tooth contact surfaces on gears  
Worn mainshaft gear bushings  
Worn or rough reverse idler gear  
Sprung or work countershaft  
Excessive backlash in constant mesh gear  
Work mainshaft pilot bearing  
Incorrect lubricant  
Low lubricant level  
Noisy main drive gear bearing

### 2. NOISE ARISING IN GEAR

Worn or rough mainshaft rear bearing  
Excessive end play on mainshaft gears  
Noisy speedometer gears  
(See Conditions under #1)

### 3. NOISE ARISING OUTSIDE

Out-of-balance fan  
Defective torsional dampener  
Out-of-balance crankshaft  
Out-of-balance flywheel  
Out-of-balance clutch assembly  
Loose engine mountings  
Worn universal joints  
U-joints improperly installed (Out of phase)  
Misaligned or sprung driveshaft  
Incorrect driveshaft assembly  
Out-of-balance driveshaft  
Out-of-balance parking brake drum

### 4. DIFFICULT SHIFTING

Improperly operating clutch (Does not release properly)  
Shift hubs tight on Shift hub sleeve splines  
Damaged pointing on clutching teeth  
Misaligned mainshaft  
Damaged or worn synchronizer assembly  
Improper linkage adjustment  
Worn or sprung shift fork

### 5. STICKING IN GEAR

Improperly operating clutch  
Shift hubs tight on shift hub splines  
Misaligned mainshaft  
Improper linkage adjustment

### 6. SLIPPING OUT OF DIRECT

Misaligned of transmission on engine  
Worn drive gear teeth  
Worn clutching teeth on shift hub or drive gear  
Insufficient tension on detent balls  
Improper linkage adjustment  
Excessive shift lever whip action  
Worn torque lock on shift hub sleeve

### 7. SLIPPING OUT OF OTHER SPEEDS

Excessive clearance between mainshaft gear and mainshaft, or worn needle bearings  
Excessive end play of mainshaft gear on mainshaft  
Worn clutching teeth  
Weak detent ball springs  
Improper linkage adjustment  
Worn torque lock on shift hub sleeve.

### 8. LOSS OF LUBRICANT

Lubricant level too high  
Damaged gaskets  
Damaged or worn oil seals  
Cracked transmission housing  
Use of incorrect lubricant  
Oil return holes under bearing caps plugged

### 9. BEARING FAILURES

Use of incorrect lubricants  
Improper bearing adjustment  
Improper reassembly in unit overhaul  
Lack of cleanliness in unit overhaul  
Foreign particles in transmission

Copyright Eaton Corporation, 2012. Eaton hereby grant their customers, vendors, or distributors permission to freely copy, reproduce and/or distribute this document in printed format. It may be copied only in its entirety without any changes or modifications. THIS INFORMATION IS NOT INTENDED FOR SALE OR RESALE, AND THIS NOTICE MUST REMAIN ON ALL COPIES.

**Note:** Features and specifications listed in this document are subject to change without notice and represent the maximum capabilities of the software and products with all options installed. Although every attempt has been made to ensure the accuracy of information contained within, Eaton makes no representation about the completeness, correctness or accuracy and assumes no responsibility for any errors or omissions. Features and functionality may vary depending on selected options.

**For spec'ing or service assistance, call 1-800-826-HELP (4357) or visit [www.eaton.com/roadranger](http://www.eaton.com/roadranger). In Mexico, call 001-800-826-4357.**

Roadranger: Eaton and trusted partners providing the best products and services in the industry, ensuring more time on the road.

**Eaton Corporation**

Vehicle Group  
P.O. Box 4013  
Kalamazoo, MI 49003 USA  
800-826-HELP (4357)  
[www.eaton.com/roadranger](http://www.eaton.com/roadranger)

Printed in USA

For parts or service call us  
Pro Gear & Transmission, Inc.



**1 (877) 776-4600**

**(407) 872-1901**

**parts@eprogear.com**

**906 W. Gore St.**

**Orlando, FL 32805**

